



1. Download de UNV link app en maak een account aan

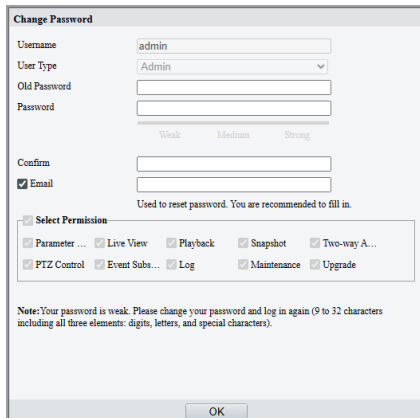



2. Zoek het ip adress van de buitenpost op doormiddel van de EZtool
[Index of /downloads/Video/Uniview/Software/EZtools](#)
3. Log in op de buitenpost met het standaard wachtwoord 123456
4. De buitenpost vraagt nu om het wachtwoord te wijzigen

A screenshot of a 'Change Password' dialog box. It contains fields for Username (admin), User Type (Admin), Old Password, Password, and Confirm. There are checkboxes for 'Email' and 'Select Permission'. Below the permissions, there is a note: 'Note: Your password is weak. Please change your password and log in again (9 to 32 characters including all three elements: digits, letters, and special characters)'. An 'OK' button is at the bottom.

5. Ga naar het tabje **Setup** → **Network** → **Platform acces**

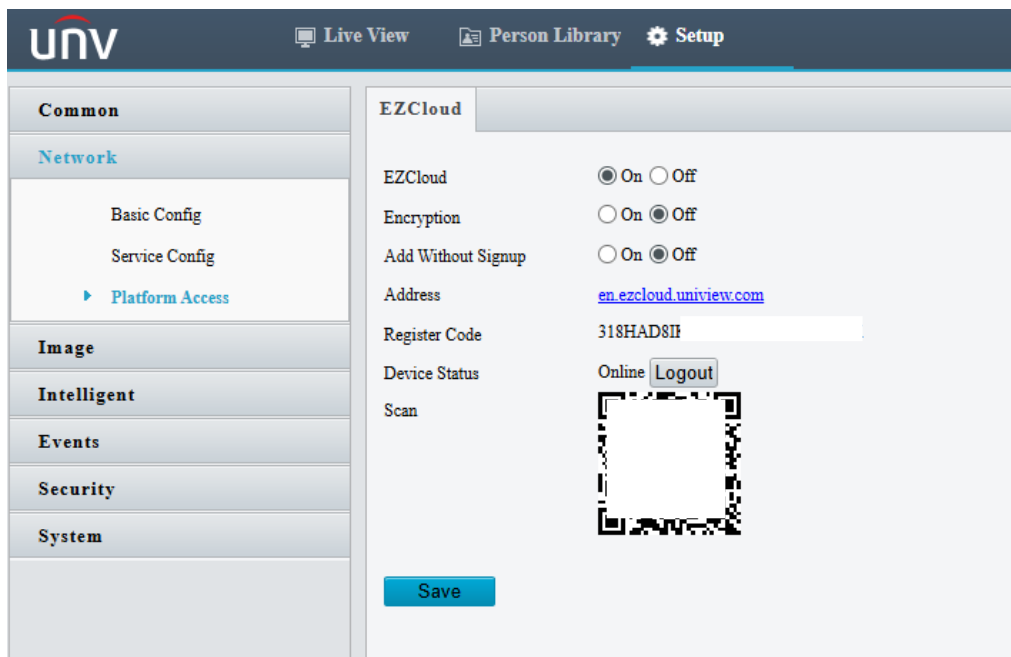A screenshot of the UNV web interface. The top navigation bar shows 'UNV', 'Live View', 'Person Library', and 'Setup'. The left sidebar has categories: 'Common', 'Image', 'Intelligent', 'Events', 'Security', and 'System'. Under 'Common', 'Network' is selected, showing 'Basic Config', 'Service Config', and 'Platform Access'. The main area is titled 'EZCloud' and contains settings for 'EZCloud' (On/Off), 'Encryption' (On/Off), 'Add Without Signup' (On/Off), 'Address' (en.ezcloud.uniview.com), 'Register Code' (318HAD8II), 'Device Status' (Online/Logout), and 'Scan' (QR code). A 'Save' button is at the bottom.

6. Ga naar de UNV link app en voeg hem toe doormiddel van het plusje rechts boven en de QR code te scannen

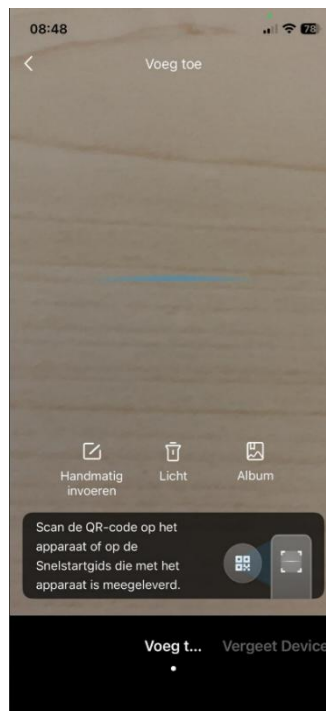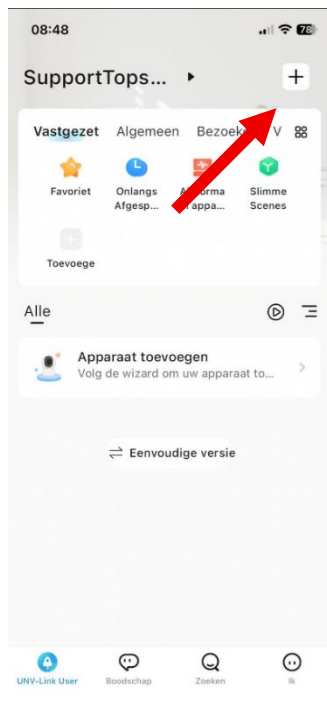

7. Zet de pushmeldingen aan

