

# B3506 Release Notes

Zhejiang Uniview Technologies Co., Ltd.

# B3506 Release Notes

Keywords: Version information, usage notes, precautions.

**Abstract:** This document provides information about the **B3506** board software, including version information, usage notes, precautions, and features.

## Acronym

Acronym	Full Name
NVR	Network Video Recorder

# Contents

<b>1 Version Information</b> .....	<b>3</b>
1.1 Version Number .....	3
1.2 Applied Product Models .....	3
1.3 Release History .....	3
<b>2 Usage Notes</b> .....	<b>3</b>
<b>3 Software Features</b> .....	<b>3</b>
<b>4 Version Change Description</b> .....	<b>4</b>
4.1 Feature Change Description .....	4
4.2 Operation Change Description .....	4
<b>5 Related Documents and Delivery Method</b> .....	<b>4</b>
<b>6 Version Upgrade Guidance</b> .....	<b>4</b>
6.1 Precautions .....	4
6.2 Upgrade Procedure .....	4
6.3 Upgrade Through the System Interface .....	5
6.4 Upgrade Through the Web Interface .....	5

# 1 Version Information

## 1.1 Version Number

B3506

## 1.2 Applied Product Models

Table 1 Applied Product Models

Product Models	Description
NVR201-04U	1 HDD, 4 analog input, 2 digital input, H.264
NVR201-08Q	1 HDD, 8 analog input, 2 digital input, H.264

## 1.3 Release History

Table 2 Released Versions

Version No.	Basic Version No.	Released On
B3506	B3505P15	2018-12-04
B3505P15	B3505P11	2018-08-22
B3505P11	B3505P07	2018-06-16
B3505P07	B3503P15	2018-05-28
B3503P15	Initial release	2018-04-08

## 2 Usage Notes

None.

## 3 Software Features

Table 3 Software Features

Service	Feature
Audio and video decoding	H.264, 1080P resolution display, up to 8Mbps bit rate.
Data storage	Local storage of recordings in hard disk(s).
Web-based management	Web-based user interface for device configuration and management.

## 4 Version Change Description

### 4.1 Feature Change Description

Table 4 B3505P05 Feature Changes

Item	Feature	Description
New features	Support CVI	Connect CVI analog camera
	Support analog PTZ	RS485 serial port: PELCO_P, PELCO_D Coaxial cable: PELCO, A-CP
Improved features	None	None
Deleted features	None	None

### 4.2 Operation Change Description

None

## 5 Related Documents and Delivery Method

Table 5 Related Document List

Manual Name	Manual Version	Delivery
Network Video Recorders Quick Guide	V1.00	Deliver with device.

## 6 Version Upgrade Guidance

### 6.1 Precautions

- This software system includes a software program mirror (Program.bin). Before you start upgrade, please back up configuration data through the system or Web interface in case the upgrade fails.
- Maintain proper network connection and power supply during the upgrade.

### 6.2 Upgrade Procedure

The version can be upgraded through the system interface and the Web interface, both support cloud upgrade.

## 6.3 Upgrade Through the System Interface


The system interface provides two options for upgrading the system software: local upgrade using a USB drive and cloud upgrade.

### 1. Local upgrade

Before you start, copy the correct upgrade file to the root directory of the USB drive.

- (1) Plug the USB drive into the USB interface on the NVR.
- (2) Log in to the system interface as “admin”.
- (3) Click **Maintain > Upgrade**.
- (4) Click **Upgrade**, select the upgrade file from the drop-down list, and then click **Upgrade**. A prompt message appears.
- (5) Click **OK**.

Figure 1 Prompt Message

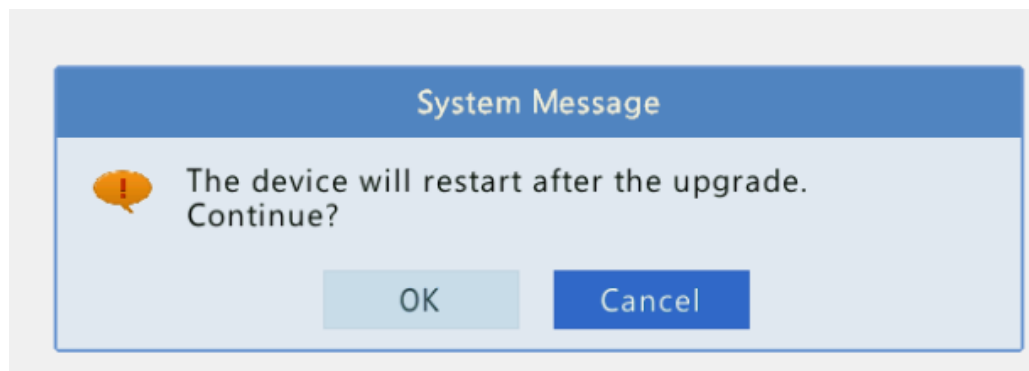

- (6) The NVR will restart automatically when the upgrade is completed.

### 2. Cloud upgrade

Before you start, check that the NVR is correctly connected to the public network.


- (1) Click **Maintain > Upgrade**, and then click **Check** to check for the latest version.
- (2) Click **Upgrade** after a newer version is detected.

## 6.4 Upgrade Through the Web Interface

Perform the following steps to upgrade through the Web interface:


- (1) Log in to the Web interface as “admin”.
- (2) Click **Settings > Maintenance > Maintenance**.

Figure 2 System Maintenance

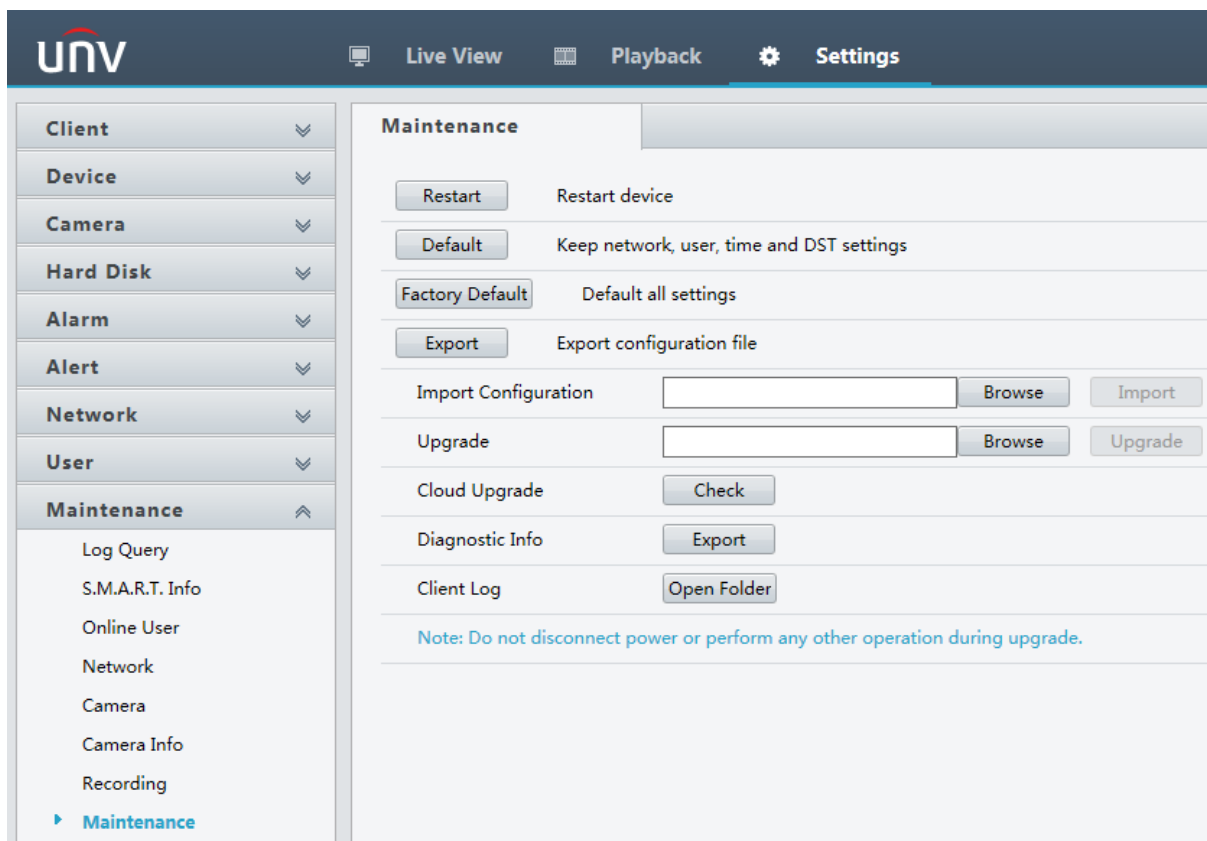

- (3) Click **Browse** right to the **Upgrade** field, select the **Program.bin** file to upgrade, and then click **Upgrade**.
- (4) If the NVR is connected to the public network, you may also click **Check** to perform a cloud upgrade. If a newer version is detected, a prompt message will appear. Click **OK** to start upgrade.

Figure 3 Prompt Message

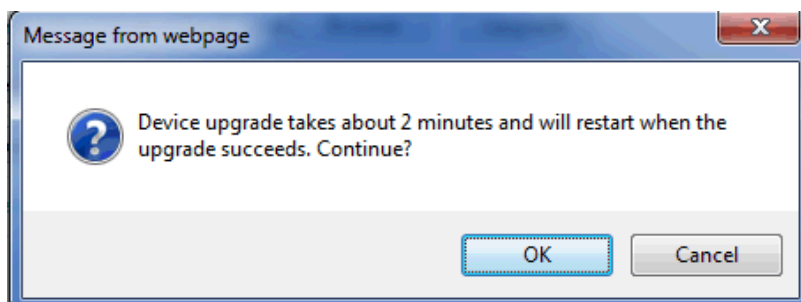

- (5) The NVR will restart automatically when the upgrade is completed.

©2018 Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.