

IPC_G6102-B5013P61D1611

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_G6102-B5013P61D1611 Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_G6102-B5013P61D1611.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

- 1 Version Information..... 3**
 - 1.1 Version Number3
 - 1.2 Release History3
 - 1.3 Version Mapping Table.....3
- 2 Feature and Change Description 3**
- 3 Version Upgrade Procedure 3**
 - 3.1 Upgrade Overview3
 - 3.1.1 Version Upgrade Environment.....3
 - 3.2 Upgrade Procedure4
 - 3.2.1 Upgrade Through the Web4

1 Version Information

1.1 Version Number

IPC_G6102-B5013P61D1611

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_G6102-B5013P61D1611	NA	2017-1-20	Initial release

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR201-04LP	R2318P01
NVR202-08EP	R2318P01

Table 3 Product models and corresponding versions

Product Series	IPC Series
Series	IPC814SR
Models	IPC814SR series: IPC814SR-DVSPF16, IPC814SR-DVPF16
Target file name	IPC_G6102-B5013P61D1611.zip

2 Feature and Change Description

None.


3 Version Upgrade Procedure

3.1 Upgrade Overview

3.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

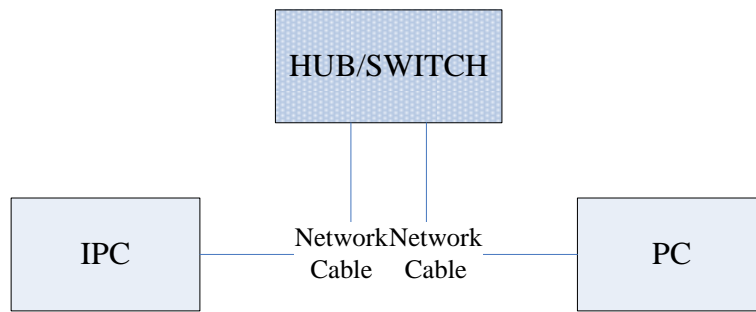

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

3.2 Upgrade Procedure

3.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup > System > Maintenance**. The **Maintenance** page is displayed.

Firmware Upgrade	
Upgrade File	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upgrade"/> <input type="checkbox"/> Upgrade Boot Program
Device Restart	
<input type="button" value="Restart"/>	Restart the device.
<input type="checkbox"/> Enable Auto Restart	<input type="text" value="Each Day"/> <input type="text" value="02:00:00"/> <input type="button" value="OK"/>
Config Management	
<input type="button" value="Default"/>	Keep current network and user settings and restore other settings to defaults.
Importing	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Import"/>
Exporting	<input type="text" value="C:\Users\Desktop\lftp"/> <input type="button" value="Browse..."/> <input type="button" value="Export"/>
Diagnosis Info	
Storage Path	<input type="text" value="C:\Users\MyLocalFiles\Debug\"/> <input type="button" value="Browse..."/> <input type="button" value="Download"/>

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_G6102 -XXXXX.zip, and then click **Open**.

Maintenance

Firmware Upgrade

Upgrade File Upgrade Boot Program

Device Restart

Restart the device.

Enable Auto Restart

Config Management

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

Diagnosis Info

Storage Path

- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.