

IPC_1511_IN_Eng-F150601

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_1511_IN_Eng-F150601

Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_1511_IN_Eng-F150601

Acronym:

Acronym	Full Name
IPC	IP Camera

Contents

1 Version Information	3
1.1 Version Number	3
1.2 Release History	3
1.3 Version Mapping Table	3
1.4 New Functions	3
1.4.1 Improved Features:	3
2 Use Notes	3
3 Version Upgrade Procedure	3
3.1 Upgrade Overview	4
3.1.1 Version Upgrade Environment	4
3.1.2 Version Upgrade Modes	4
3.2 Upgrade Procedure	4
3.2.1 Upgrade Through the Web	4

1 Version Information

1.1 Version Number

IPC_1511_IN_Eng-F150601

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_1511_IN_Eng-F150601	IPC_1511_IN_Eng-F150401	2015-08-06	Improved Release

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR202-08EP	B2312P15

Table 3 Product models and corresponding versions

Product Series	IPC Series	Initial Version
Series	IPC542E, IPC541E, IPC542L, IPC541L	
Models	IPC542E series: IPC542E-NL-IN, IPC542E-IN, IPC542E-NW-IN	F141201P05P06
	IPC541E series: IPC541E-NW-IN, IPC541E-IN, IPC541E-NL-IN	
	IPC542L series: IPC542L-IN	
	IPC541L series: IPC541L-IN, IPC541E-DL-IN	
Target file name	IPC_1511_IN_Eng-F150601.zip	

1.4 New Functions

1.4.1 Improved Features:

- (1) Supports third-party DDNS.
- (2) Supports half hour time zones.
- (3) One-click reset.
- (4) Supports privacy masks for up to 24 channels.

2 Use Notes

None.


3 Version Upgrade Procedure

3.1 Upgrade Overview

3.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network Architecture

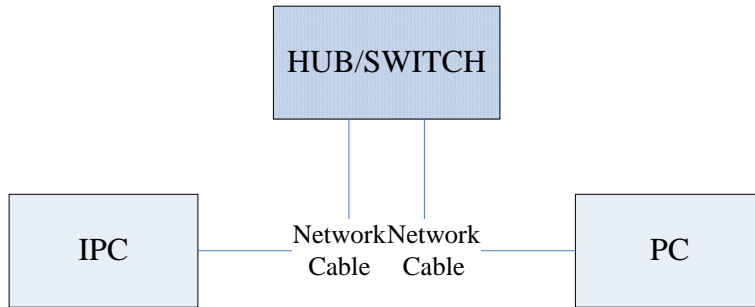

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.


3.1.2 Version Upgrade Modes

You can upgrade through the Web.

3.2 Upgrade Procedure

3.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: admin).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

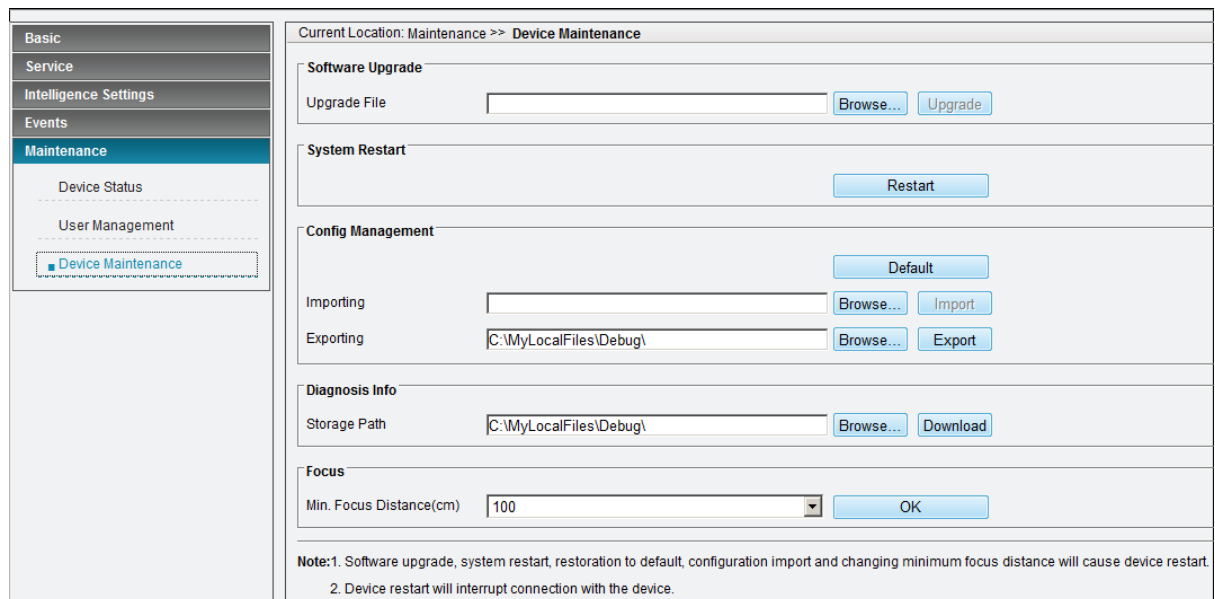

- (3) Click **Browse** in the **Software Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_1511_IN_Eng-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.

- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2015, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.