

IPC_5202-F5018P02D1508

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_5202-F5018P02D1508 Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_5202-F5018P02D1508.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

1 Version Information	3
1.1 Version Number	3
1.2 Release History	3
1.3 Version Mapping Table	3
2 Usage Notes	4
3 Version Upgrade Description	4
3.1 Feature Upgrade Description	4
3.2 Operation Change Description	4
4 Version Upgrade Procedure	4
4.1 Upgrade Overview	4
4.1.1 Version Upgrade Environment	4
4.1.2 Version Upgrade Modes	4
4.2 Upgrade Procedure	5
4.2.1 Upgrade Through the Web	5

1 Version Information

1.1 Version Number

IPC_5202-F5018P02D1508

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_5202-F5018P02D1508	IPC_5202-F0018P01D1508	2015-10-20	improved release

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR202-08EP	B2315P05
NVR201-04E	B2315P05
NVR201-04LP	B2315P05
NVR201-08L	B2315P05
NVR202-08E	B2315P05
NVR201-04EP	B2315P05

Table 3 Product models and corresponding versions

Product Series	IPC Series	Initial Version
Series	IPC542E, IPC541E, IPC241E, IPC242E, IPC341E, IPC342E, IPC3231ER, IPC3232ER, IPC341LR, IPC342LR	F150501
Models	IPC542E series: IPC542E-DL-IN, IPC542E-DU, IPC542E-DUG, IPC542E-DLC, IPC542E-DUC	
	IPC541E series: IPC541E-DL-IN, IPC541E-DLC	
	IPC241E series: IPC241E-DLIR-IN, IPC241ER5-DL	
	IPC242E series: IPC242E-DLIR-IN, IPC242ER5-DL	
	IPC341E series: IPC341E-DLVIR-IN	
	IPC342E series: IPC342E-DLVIR-IN	
	IPC341LR series: IPC341LR-V	
IPC342LR series: IPC342LR-V		

	IPC3231ER series: IPC3231ER-DV,IPC3231ER-VS	
	IPC3232ER series: IPC3232ER-DV,IPC3232ER-VS	
Target file name	IPC_5202-F5018P02D1508.zip	

2 Usage Notes

None.

3 Version Upgrade Description

3.1 Feature Upgrade Description

None.

3.2 Operation Change Description

None.


4 Version Upgrade Procedure

4.1 Upgrade Overview

4.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

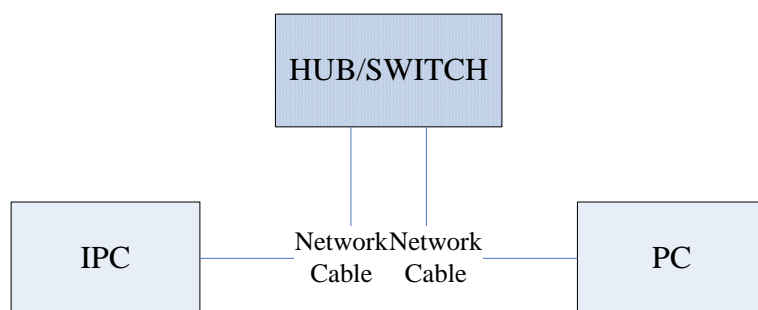

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.


4.1.2 Version Upgrade Modes

You can upgrade through the Web.

4.2 Upgrade Procedure

4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: admin).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

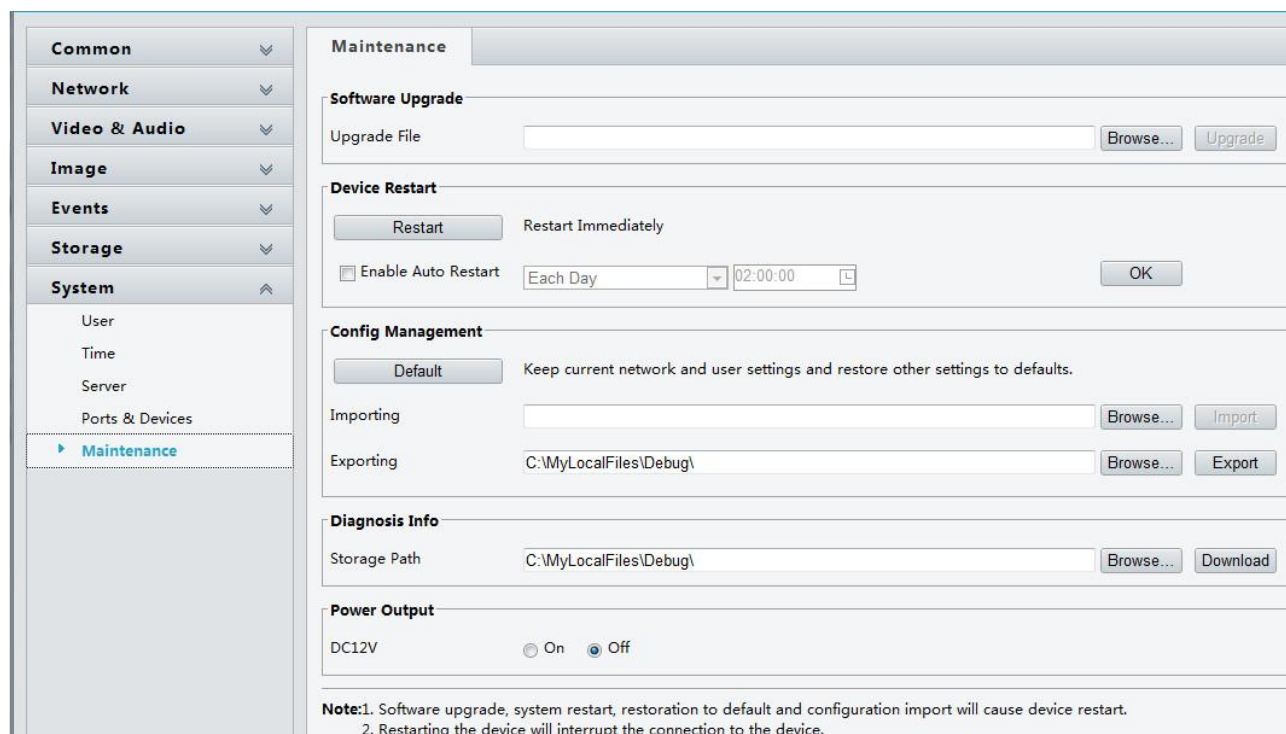

- (3) Click **Browse** in the **Software Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_5202-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.