# IPC\_5202-F50191509 Release Notes

Zhejiang Uniview Technologies Co., Ltd

# IPC\_5202-F50191509 Release Notes

**Keywords:** Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for

IPC\_5202-F50191509.

#### Acronym:

Acronym	Full Name
IPC	IP Camera

# Content

1 Version Information	3
1.1 Version Number ·····	3
1.2 Release History ·····	3
1.3 Version Mapping Table·····	3
2 Feature Change Description · · · · · · · · · · · · · · · · · · ·	4
3 Version Upgrade Description ·····	4
3.1 Feature Upgrade Description ·····	4
3.2 Operation Change Description	4
4 Version Upgrade Procedure ·····	4
4.1 Upgrade Overview·····	4
4.1.1 Version Upgrade Environment·····	4
4.1.2 Version Upgrade Modes·····	4
4.2 Upgrade Procedure ·····	5
4.2.1 Upgrade Through the Web ······	5

## 1 Version Information

## 1.1 Version Number

IPC\_5202-F50191509

## 1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_5202-F50191509	IPC_5202-F0018P02D1508	2015-11-5	improved release

# 1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)	
NVR-B200-E4@32	B3115P30	
NVR304-32E	B3115P30	

Table 3 Product models and corresponding versions

Product Series	IPC Series	Initial Version
Series	IPC542E, IPC541E, IPC241E, IPC242E, IPC341E, IPC342E,	
Selles	IPC3231ER,IPC3232ER, IPC341LR, IPC342LR	
	IPC542E series: IPC542E-DL-IN, IPC542E-DU, IPC542E-DUG,	F150501
Models	IPC542E-DLC, IPC542E-DUC	
	IPC541E series: IPC541E-DL-IN, IPC541E-DLC	
	IPC241E series: IPC241E-DLIR-IN, IPC241ER5-DL	
	IPC242E series: IPC242E-DLIR-IN, IPC242ER5-DL	
	IPC341E series: IPC341E-DLVIR-IN	
	IPC342E series: IPC342E-DLVIR-IN	
	IPC341LR series: IPC341LR-V	
	IPC342LR series: IPC342LR-V	
	IPC3231ER series: IPC3231ER-DV,IPC3231ER-VS	
	IPC3232ER series: IPC3232ER-DV,IPC3232ER-VS	
Target file name	IPC_5202-F50191509.zip	

## 2 Feature Change Description

- 1.New white balance lock mode.
- 2. OSD date and time displayed in different lines.

## 3 Version Upgrade Description

## 3.1 Feature Upgrade Description

None.

## 3.2 Operation Change Description

None.


## 4 Version Upgrade Procedure

## 4.1 Upgrade Overview

#### 4.1.1 Version Upgrade Environment

#### 1. Network Architecture for Upgrade

Figure 1 Network architecture

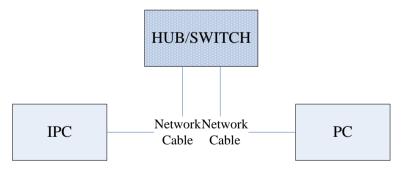

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.


#### 4.1.2 Version Upgrade Modes

You can upgrade through the Web.

#### 4.2 Upgrade Procedure

#### 4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

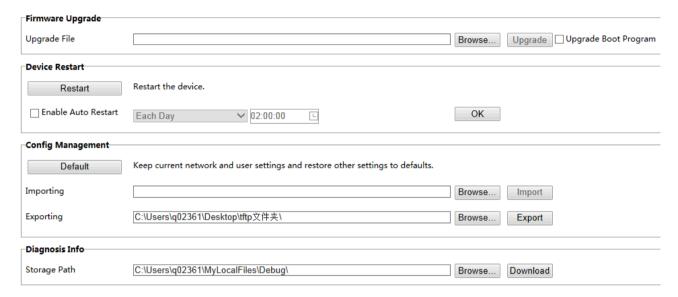

- (3) Click **Browse** in the **Software Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC\_5202-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2015, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co.. Ltd.

The information in this manual is subject to change without notice. The information in this manual is subject to change without notice.