

IPC_5202-F5022P06D1603

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_5202-F5022P06D1603 Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_5202-F5022P06D1603.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

- 1 Version Information..... 3**
 - 1.1 Version Number3
 - 1.2 Release History3
 - 1.3 Version Mapping Table.....3
- 2 Feature Change Description 4**
- 3 Version Upgrade Procedure 4**
 - 3.1 Upgrade Overview4
 - 3.1.1 Version Upgrade Environment.....4
 - 3.1.2 Version Upgrade Modes.....4
 - 3.2 Upgrade Procedure4
 - 3.2.1 Upgrade Through the Web4

1 Version Information

1.1 Version Number

IPC_5202-F5022P06D1603

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_5202-F5022P06D1603	IPC_5202-F5021D1602	2016-6-8	improved release

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR308-64R	B3118P01

Table 3 Product models and corresponding versions

Product Series	IPC Series
Series	IPC542E, IPC541E, IPC241E, IPC242E, IPC341E, IPC342E, IPC3231ER, IPC3232ER, IPC341LR, IPC342LR
Models	IPC542E series: IPC542E-DL-IN, IPC542E-DU, IPC542E-DUG, IPC542E-DLC, IPC542E-DUC
	IPC541E series: IPC541E-DL-IN, IPC541E-DLC
	IPC241E series: IPC241E-DLIR-IN, IPC241ER5-DL
	IPC242E series: IPC242E-DLIR-IN, IPC242ER5-DL
	IPC341E series: IPC341E-DLVIR-IN
	IPC342E series: IPC342E-DLVIR-IN
	IPC341LR series: IPC341LR-V
	IPC342LR series: IPC342LR-V
	IPC3231ER series: IPC3231ER-VS
IPC3232ER series: IPC3232ER-DV, IPC3232ER-VS	
Target file name	IPC_5202-F5022P06D1603.zip

2 Feature Change Description

- 1.Login with IPv6 address.
- 2.Custom time to resume interrupted scheduled patrol.
- 3.Custom time to resume home position.
- 4.Internet access with weak password will be denied.
- 5.Fast forward/backward and timeline bar-dragging when playing queried recordings in Internet Explorer.


3 Version Upgrade Procedure

3.1 Upgrade Overview

3.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

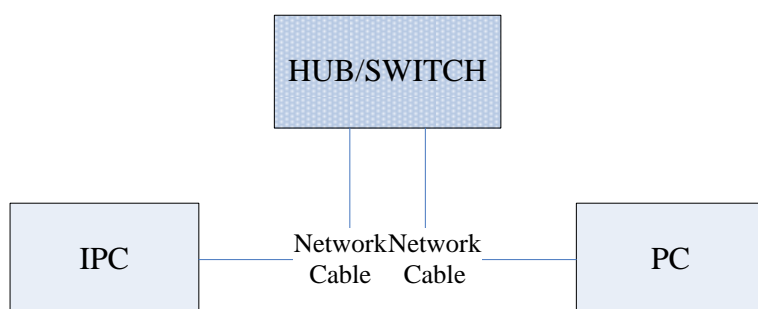

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

3.1.2 Version Upgrade Modes

You can upgrade through the Web.

3.2 Upgrade Procedure

3.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

Firmware Upgrade

Upgrade File Upgrade Boot Program

Device Restart

Restart the device.

Enable Auto Restart

Config Management

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

Diagnosis Info

Storage Path

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_5202-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2016, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice. The information in this manual is subject to change without notice.