IPC_6201-F5021P07D1603 Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_6201-F5021P07D1603

Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for

IPC_6201-F5021P07D1603.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

1 Version Information	3
1.1 Version Number	3
1.2 Release History ·····	3
1.3 Version Mapping Table·····	
1.4 New Functions	
2 Version Upgrade Procedure ······	
2.1 Upgrade Overview·····	
2.1.1 Version Upgrade Environment······	
2.2 Upgrade Procedure ······	
2.2.1 Upgrade Through the Web	
L.L. I UDUIQUE IIIIUUUII IIIE NVED	

1 Version Information

1.1 Version Number

IPC_6201-F5021P07D1603

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_6201-F5021P07D1603	IPC_6201-F5020D1509	2016-6-8	Improved release

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)	
NVR301-04-P4	B3202	
NVR301-08-P8	B3202	

Table 3 Product models and corresponding versions

Product Series	IPC Series	Initial Version
Series	IPC241E, IPC242E, IPC241L, IPC242L	
Models	IPC241E series: IPC241E-IR-IN, IPC241E-IR-Z-IN	- F6215IN141102
	IPC242E series: IPC242E-IR-Z-IN, IPC242E-IR-IN	
	IPC241L series: IPC241L-IR-IN	
	IPC242L series: IPC242L-IR-IN	
Target file name	IPC_6201-F5021P07D1603.zip	

1.4 New Functions

- 1.Login with IPv6 address.
- 2. Custom time to resume interrupted scheduled patrol.
- 3. Custom time to resume home position.
- 4.Internet access with weak password will be denied.

5.Fast forward/backward and timeline bar-dragging when playing queried recordings in Internet Explorer.


2 Version Upgrade Procedure

2.1 Upgrade Overview

2.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

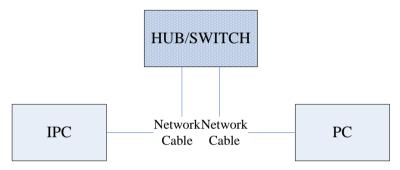


As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

2.2 Upgrade Procedure

2.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

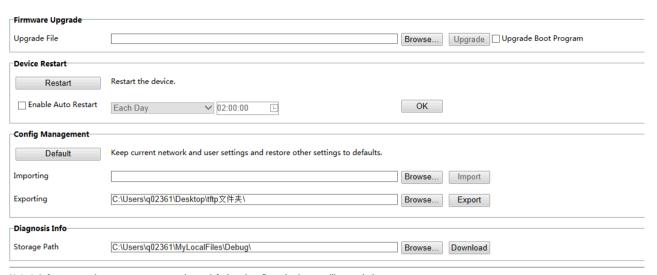

Note:1. Software upgrade, system restart, restoration to default and configuration import will cause device restart.

2. Restarting the device will interrupt the connection to the device.

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_6201-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2016, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.