

IPC_8101-F5017D1509

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_8101-F5017D1509 Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_8101-F5017D1509.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

1 Version Information	3
1.1 Version Number	3
1.2 Release History	3
1.3 Version Mapping Table	3
2 Feature Change Description	3
3 Usage Notes	4
4 Version Upgrade Procedure	4
4.1 Upgrade Overview	4
4.1.1 Version Upgrade Environment	4
4.2 Upgrade Procedure	4
4.2.1 Upgrade Through the Web	4

1 Version Information

1.1 Version Number

IPC_8101-F5017D1509

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_8101-F5017D1509	IPC_8101_IN_Eng-F150801	2015-10-28	improved release

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR-B200-E4@32	B3115P30
NVR304-32E	B3115P30

Table 3 Product models and corresponding versions

Product Series	IPC Series	Initial Version
Series	IPC221L, IPC221E, IPC222E, IPC221S, IPC321E, IPC321L, IPC321S, IPC322E	
Models	IPC221L series: IPC221L-IR-F60-IN, IPC221L-IR-F120-IN	F8111IN141101
	IPC221E series: IPC221E-IR-F120-IN, IPC221E-IR-F60-IN	
	IPC222E series: IPC222E-IR-F60-IN, IPC222E-IR-F120-IN	
	IPC221S series: IPC221S-IR-F60-IN, IPC221S-IR-F120-IN	
	IPC321E series: IPC321E-IR-F36-IN, IPC321E-IR-F60-IN, IPC321E-D-F21-IN	
	IPC321L series: IPC321L-IR-F36-IN, IPC321L-IR-F60-IN	
	IPC321S series: IPC321S-IR-F36-IN, IPC321S-IR-F60-IN	
	IPC322E series: IPC322E-IR-F36-IN, IPC322E-IR-F60-IN	
Target file name	IPC_8101-F5017D1509.zip	

2 Feature Change Description

None.

3 Usage Notes

None.


4 Version Upgrade Procedure

4.1 Upgrade Overview

4.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

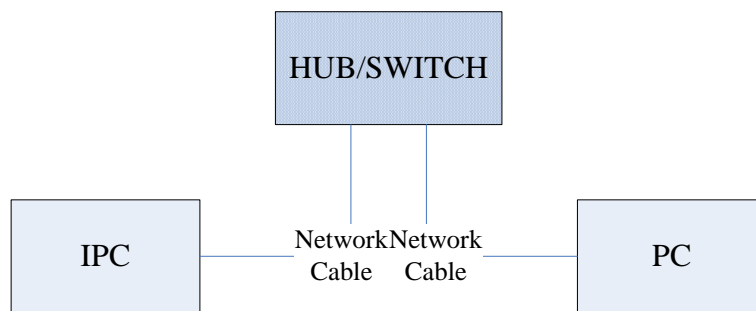

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

4.2 Upgrade Procedure

4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

Firmware Upgrade

Upgrade File Upgrade Boot Program

Device Restart

Restart the device.

Enable Auto Restart

Config Management

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

Diagnosis Info

Storage Path

Note:1. Software upgrade, system restart, restoration to default and configuration import will cause device restart.
2. Restarting the device will interrupt the connection to the device.

- (3) Click **Browse** in the **Software Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_8101-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.