

IPC_8101-F5018P06D1603

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_8101-F5018P06D1603 Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_8101-F5018P06D1603.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

- 1 Version Information..... 3**
 - 1.1 Version Number3
 - 1.2 Release History3
 - 1.3 Version Mapping Table.....3
- 2 Feature Change Description 3**
- 3 Usage Notes 4**
- 4 Version Upgrade Procedure 4**
 - 4.1 Upgrade Overview.....4
 - 4.1.1 Version Upgrade Environment.....4
 - 4.2 Upgrade Procedure4
 - 4.2.1 Upgrade Through the Web4

1 Version Information

1.1 Version Number

IPC_8101-F5018P06D1603

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_8101-F5018P06D1603	IPC_8101-F5018P05D1603	2016-6-8	improved release

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR301-04-P4	B3202
NVR301-08-P8	B3202

Table 3 Product models and corresponding versions

Product Series	IPC Series	Initial Version
Series	IPC221L, IPC221E, IPC222E, IPC221S, IPC321E, IPC321L, IPC321S, IPC322E	
Models	IPC221L series: IPC221L-IR-F60-IN, IPC221L-IR-F120-IN	F8111IN141101
	IPC221E series: IPC221E-IR-F120-IN, IPC221E-IR-F60-IN	
	IPC222E series: IPC222E-IR-F60-IN, IPC222E-IR-F120-IN	
	IPC221S series: IPC221S-IR-F60-IN, IPC221S-IR-F120-IN	
	IPC321E series: IPC321E-IR-F36-IN, IPC321E-IR-F60-IN, IPC321E-D-F21-IN	
	IPC321L series: IPC321L-IR-F36-IN, IPC321L-IR-F60-IN	
	IPC321S series: IPC321S-IR-F36-IN, IPC321S-IR-F60-IN	
	IPC322E series: IPC322E-IR-F36-IN, IPC322E-IR-F60-IN	
Target file name	IPC_8101-F5018P06D1603.zip	

2 Feature Change Description

1.Login with IPv6 address.

2. Custom time to resume interrupted scheduled patrol.
3. Custom time to resume home position.
4. Internet access with weak password will be denied.
5. Fast forward/backward and timeline bar-dragging when playing queried recordings in Internet Explorer.

3 Usage Notes

None.


4 Version Upgrade Procedure

4.1 Upgrade Overview

4.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

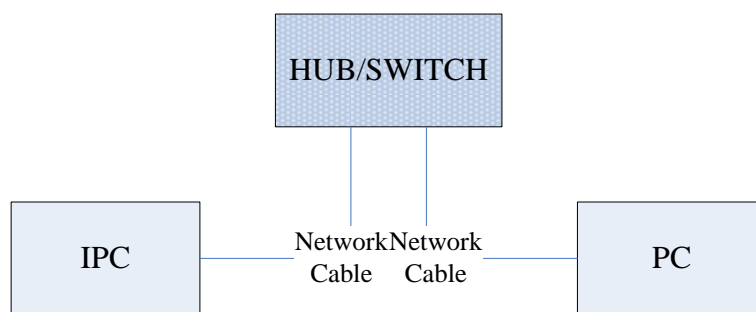

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

4.2 Upgrade Procedure

4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

Firmware Upgrade

Upgrade File Upgrade Boot Program

Device Restart

Restart the device.

Enable Auto Restart

Config Management

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

Diagnosis Info

Storage Path

Note:1. Software upgrade, system restart, restoration to default and configuration import will cause device restart.
2. Restarting the device will interrupt the connection to the device.

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_8101-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.