IPC_8101_IN_Eng-F150401 Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_8101_IN_Eng-F150401 Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for

IPC_8101_IN_Eng-F150401

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

··· 3
3
3
3
4
4
4
4
4
5
5

1 Version Information

1.1 Version Number

IPC_8101_IN_Eng-F150401

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_8101_IN_Eng-F15040 1	IPC_8101_IN_Eng-F141201P 05	2015-07-03	improved release

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)	
NVR202-08E	B2310P10	
NVR208-16	B2210P10	

Table 3 Product models and corresponding versions

Product Series	IPC Series	Initial Version	
Series	IPC221L, IPC221E, IPC222E, IPC221S, IPC321E, IPC321L, IPC321S, IPC322E		
Models	IPC221L series: IPC221L-IR-F60-IN, IPC221L-IR-F120-IN		
	IPC221E series: IPC221E-DIR-F120-IN, IPC221E-DIR-F60-IN		
	IPC222E series: IPC222E-IR-F60-IN, IPC222E-IR-F120-IN		
	IPC221S series: IPC221S-IR-F60-IN, IPC221S-IR-F120-IN		
	IPC321E series: IPC321E-DIR-F36-IN, IPC321E-DIR-F60-IN, IPC321E-D-F21-IN	F8111IN14110	
	IPC321L series: IPC321L-IR-F36-IN, IPC321L-IR-F60-IN		
	IPC321S series: IPC321S-IR-F36-IN, IPC321S-IR-F60-IN		
	IPC322E series: IPC322E-IR-F36-IN, IPC322E-IR-F60-IN		
Target file name	IPC_8101_IN_Eng-F141201P05-ALL.zip		

1.4 New Functions

Improved Features:

- 1 . QR code available on the Web interface of IP camera.
- 2 . Supports ONVIF snapshot.
- 3. Improved security features.
- 4. Supports cloud upgrade of IP cameras through the NVR.
- 5 . Supports Korean PTZ protocol.
- 6 . Supports multiple streams.

Issues:

- 1. Improved ONVIF support.
- 2. Improved the response speed when setting privacy mask.
- 6 . Same OSD size on the same display at different resolutions.

2 Usage Notes

None.


3 Version Upgrade Procedure

3.1 Upgrade Overview

3.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

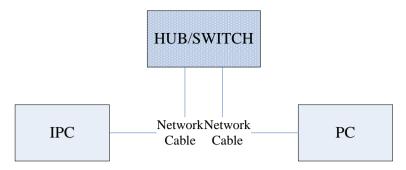


As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

3.2 Upgrade Procedure

3.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: admin).
- (2) Click Setup > Maintenance > Device Maintenance. The Device Maintenance page is displayed.

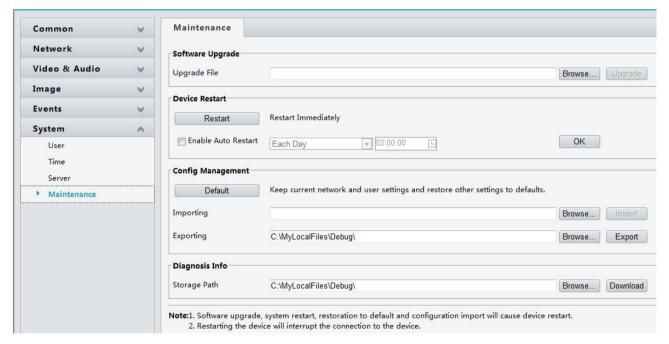

- (3) Click **Browse** in the **Software Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_8101_IN_Eng-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

 $\hbox{@ 2014-2015},$ Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.