

IPC_C6102-B0001P99D1907

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_C6102-B0001P99D1907

Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_C6102-B0001P99D1907.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

1 Version Information	3
1.1 Version Number	3
1.2 Release History	3
1.3 Version Mapping Table	3
2 Feature Change Description	3
3 Version Upgrade Description	3
4 Version Upgrade Procedure	4
4.1 Upgrade Overview	4
4.1.1 Version Upgrade Environment	4
4.1.2 Version Upgrade Modes	4
4.2 Upgrade Procedure	4
4.2.1 Upgrade Through the Web	4

1 Version Information

1.1 Version Number

IPC_C6102-B0001P99D1907

1.2 Release History

Table1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_C6102-B0001P99D1907	NA	2020-07-14	Initial release

Table2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR	B3801.18.31.C21105.200410

1.3 Version Mapping Table

Table3 Product models and corresponding versions

Product Series	IPC Series
Series	IPC3232SA 、 IPC3632SA 、 IPC2A22SA
Models	IPC3232SA series: IPC3232SA-DZK IPC3632SA series: IPC3632SA-ADZK IPC2A22SA series: IPC2A22SA-DZK
Target file name	IPC_C6102-B0001P99D1907.zip

2 Feature Change Description

None.

3 Version Upgrade Description

None.


4 Version Upgrade Procedure

4.1 Upgrade Overview

4.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure1Network architecture

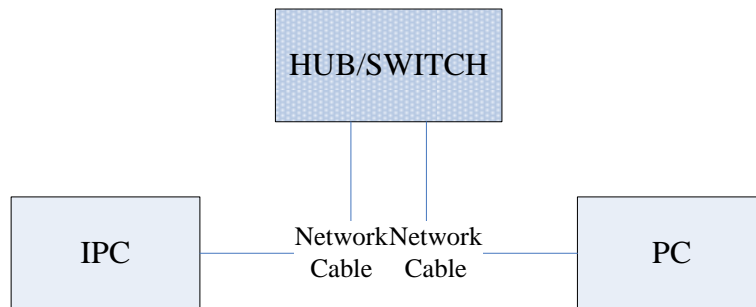

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

4.1.2 Version Upgrade Modes

You can upgrade through the Web.

4.2 Upgrade Procedure

4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup>Maintenance>Device Maintenance**. The **Device Maintenance** page is displayed.

Firmware Upgrade

Upgrade File Upgrade Boot Program

Device Restart

Restart the device.

Enable Auto Restart

Config Management

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

Diagnosis Info

Storage Path

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_C6102-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2020,Zhejiang Uniview Technologies Co., Ltd.All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without priorwritten consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.