

IPC_D1201-B5015D1509

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_D1201-B5015D1509

Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_D1201-B5015D1509.

Acronym:

| Acronym | Full Name |
|---------|-----------|
| IPC | IP Camera |

Content

| | |
|--|----------|
| 1 Version Information | 3 |
| 1.1 Version Number | 3 |
| 1.2 Release History | 3 |
| 1.3 Version Mapping Table | 3 |
| 1.4 Feature Change Description | 4 |
| 2 Version Upgrade Procedure | 4 |
| 2.1 Upgrade Overview | 4 |
| 2.1.1 Version Upgrade Environment | 4 |
| 2.1.2 Version Upgrade Modes | 5 |
| 2.2 Upgrade Procedure | 5 |
| 2.2.1 Upgrade Through the Web | 5 |

1 Version Information

1.1 Version Number

IPC_D1201-B5015D1509

1.2 Release History

Table 1 Released versions

| Version No. | Basic Version No. | Released On | Remarks |
|----------------------|--------------------------|-------------|------------------------|
| IPC_D1201-B5015D1509 | IPC_D1201_IN_Eng-B150801 | 2015-10-30 | Release of improvement |

Table 2 Version mapping table

| Product Mapping Item | Version No. (For External) |
|----------------------|----------------------------|
| NVR-B200-E4@32 | B3115P30 |
| NVR304-32E | B3115P30 |

1.3 Version Mapping Table

Table 3 Product models and corresponding versions

| Product Series | IPC Series | Initial Version |
|----------------|--|-----------------|
| Series | IPC3611SR3、IPC3611ER3、IPC3612SR3、IPC3612ER3、IPC2211SR3、IPC2211ER3、IPC2212SR3、IPC2212ER3 | |
| Models | IPC3611SR3 series: IPC3611SR3-PF28、IPC3611SR3-F28、IPC3611SR3-PF36、IPC3611SR3-F36、IPC3611SR3-PF60、IPC3611SR3-F60 | B150401P03 |
| | IPC3611ER3 series: IPC3611ER3-PF28、IPC3611ER3-F28、IPC3611ER3-PF36、IPC3611ER3-F36、IPC3611ER3-PF60、IPC3611ER3-F60 | |
| | IPC3612SR3 series: IPC3612SR3-PF28、IPC3612SR3-F28、IPC3612SR3-PF36、IPC3612SR3-F36、IPC3612SR3-PF60、IPC3612SR3-F60 | |
| | IPC3612ER3 series: IPC3612ER3-PF28、IPC3612ER3-F28、IPC3612ER3-PF36、IPC3612ER3-F36、IPC3612ER3-PF60、IPC3612ER3-F60 | |
| | IPC2211SR3 series: IPC2211SR3-PF36、IPC2211SR3-F36、IPC2211SR3-PF60、IPC2211SR3-F60、IPC2211SR3-PF120、IPC2211SR3-F120 | |

| | |
|------------------|--|
| | <p>IPC2211ER3 series: IPC2211ER3-PF36、IPC2211ER3-F36、IPC2211ER3-PF60、IPC2211ER3-F60、IPC2211ER3-PF120、IPC2211ER3-F120</p> <p>IPC2212SR3 series: IPC2212SR3-PF36、IPC2212SR3-F36、IPC2212SR3-PF60、IPC2212SR3-F60、IPC2212SR3-PF120、IPC2212SR3-F120</p> <p>IPC2212ER3 series:IPC2212ER3-PF36、IPC2212ER3-F36、IPC2212ER3-PF60、IPC2212ER3-F60、IPC2212ER3-PF120、IPC2212ER3-F120</p> |
| Target file name | IPC_D1201-B5015D1509.zip |

1.4 Feature Change Description

- 1.NTSC/PAL switch for BNC output;
- 2.New feature: White Balance Lock.
3. Bug fixes.


2 Version Upgrade Procedure

2.1 Upgrade Overview

2.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

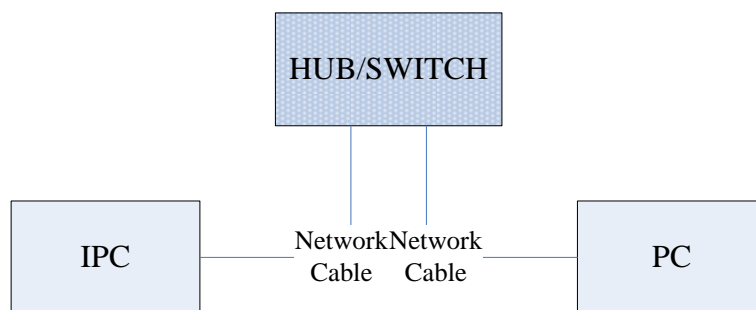

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

2.1.2 Version Upgrade Modes

You can upgrade through the Web.

2.2 Upgrade Procedure

2.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

| | |
|--|--|
| Firmware Upgrade | |
| Upgrade File | <input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upgrade"/> <input type="checkbox"/> Upgrade Boot Program |
| Device Restart | |
| <input type="button" value="Restart"/> | Restart the device. |
| <input type="checkbox"/> Enable Auto Restart | <input type="text" value="Each Day"/> <input type="text" value="02:00:00"/> <input type="button" value="OK"/> |
| Config Management | |
| <input type="button" value="Default"/> | Keep current network and user settings and restore other settings to defaults. |
| Importing | <input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Import"/> |
| Exporting | <input type="text" value="C:\Users\q02361\Desktop\lftp文件夹\"/> <input type="button" value="Browse..."/> <input type="button" value="Export"/> |
| Diagnosis Info | |
| Storage Path | <input type="text" value="C:\Users\q02361\MyLocalFiles\Debug\"/> <input type="button" value="Browse..."/> <input type="button" value="Download"/> |

- (3) Click **Browse** in the **Software Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_D1201-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2015, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.