

IPC_D1201-B5015P01D1509

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_D1201-B5015P01D1509

Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_D1201-B5015P01D1509.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

1 Version Information	3
1.1 Version Number	3
1.2 Release History	3
1.3 Version Mapping Table	3
1.4 Feature Change Description	4
2 Version Upgrade Procedure	4
2.1 Upgrade Overview	4
2.1.1 Version Upgrade Environment	4
2.1.2 Version Upgrade Modes	5
2.2 Upgrade Procedure	5
2.2.1 Upgrade Through the Web	5

1 Version Information

1.1 Version Number

IPC_D1201-B5015P01D1509

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_D1201-B5015P01D1509	IPC_D1201_IN_Eng-B150801	2015-11-6	Release of improvement

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR-B200-E4@32	B3115P30
NVR304-32E	B3115P30

1.3 Version Mapping Table

Table 3 Product models and corresponding versions

Product Series	IPC Series	Initial Version
Series	IPC3611SR3、IPC3611ER3、IPC3612SR3、IPC3612ER3、IPC2211SR3、IPC2211ER3、IPC2212SR3、IPC2212ER3	
Models	IPC3611SR3 series: IPC3611SR3-PF28、IPC3611SR3-F28、IPC3611SR3-PF36、IPC3611SR3-F36、IPC3611SR3-PF60、IPC3611SR3-F60	B150401P03
	IPC3611ER3 series: IPC3611ER3-PF28、IPC3611ER3-F28、IPC3611ER3-PF36、IPC3611ER3-F36、IPC3611ER3-PF60、IPC3611ER3-F60	
	IPC3612SR3 series: IPC3612SR3-PF28、IPC3612SR3-F28、IPC3612SR3-PF36、IPC3612SR3-F36、IPC3612SR3-PF60、IPC3612SR3-F60	
	IPC3612ER3 series: IPC3612ER3-PF28、IPC3612ER3-F28、IPC3612ER3-PF36、IPC3612ER3-F36、IPC3612ER3-PF60、IPC3612ER3-F60	
	IPC2211SR3 series: IPC2211SR3-PF36、IPC2211SR3-F36、IPC2211SR3-PF60、IPC2211SR3-F60、IPC2211SR3-PF120、IPC2211SR3-F120	

	<p>IPC2211ER3 series: IPC2211ER3-PF36、IPC2211ER3-F36、IPC2211ER3-PF60、IPC2211ER3-F60、IPC2211ER3-PF120、IPC2211ER3-F120</p> <p>IPC2212SR3 series: IPC2212SR3-PF36、IPC2212SR3-F36、IPC2212SR3-PF60、IPC2212SR3-F60、IPC2212SR3-PF120、IPC2212SR3-F120</p> <p>IPC2212ER3 series:IPC2212ER3-PF36、IPC2212ER3-F36、IPC2212ER3-PF60、IPC2212ER3-F60、IPC2212ER3-PF120、IPC2212ER3-F120</p>
Target file name	IPC_D1201-B5015P01D1509.zip

1.4 Feature Change Description

- 1.NTSC/PAL switch for BNC output;
- 2.New feature: White Balance Lock.
3. Bug fixes.


2 Version Upgrade Procedure

2.1 Upgrade Overview

2.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

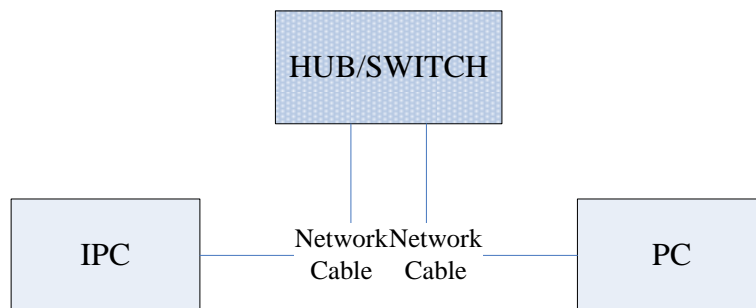

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

2.1.2 Version Upgrade Modes

You can upgrade through the Web.

2.2 Upgrade Procedure

2.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

Firmware Upgrade	
Upgrade File	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upgrade"/> <input type="checkbox"/> Upgrade Boot Program
Device Restart	
<input type="button" value="Restart"/>	Restart the device.
<input type="checkbox"/> Enable Auto Restart	<input type="text" value="Each Day"/> <input type="text" value="02:00:00"/> <input type="button" value="OK"/>
Config Management	
<input type="button" value="Default"/>	Keep current network and user settings and restore other settings to defaults.
Importing	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Import"/>
Exporting	<input type="text" value="C:\Users\q02361\Desktop\lftp文件夹\"/> <input type="button" value="Browse..."/> <input type="button" value="Export"/>
Diagnosis Info	
Storage Path	<input type="text" value="C:\Users\q02361\MyLocalFiles\Debug\"/> <input type="button" value="Browse..."/> <input type="button" value="Download"/>

- (3) Click **Browse** in the **Software Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_D1201-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2015, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.