

IPC_D1201-B5019P01D1604

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_D1201-B5019P01D1604

Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_D1201-B5019P01D1604.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

1 Version Information	3
1.1 Version Number	3
1.2 Release History	3
1.3 Version Mapping Table	3
2 Feature Change Description	4
3 Version Upgrade Procedure	4
3.1 Upgrade Overview	4
3.1.1 Version Upgrade Environment	4
3.1.2 Version Upgrade Modes	5
3.2 Upgrade Procedure	5
3.2.1 Upgrade Through the Web	5

1 Version Information

1.1 Version Number

IPC_D1201-B5019P01D1604

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_D1201-B5019P01D1604	IPC_D1201-B5017D1602	2016-6-7	Improved release

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR201-04LP	R2318P01
NVR202-08EP	R2318P01

1.3 Version Mapping Table

Table 3 Product models and corresponding versions

Product Series	IPC Series
Series	IPC3611SR3、IPC3611ER3、IPC3612SR3、IPC3612ER3、IPC2211SR3、IPC2211ER3、IPC2212SR3、IPC2212ER3
Models	IPC3611SR3 series: IPC3611SR3-PF28、IPC3611SR3-F28、IPC3611SR3-PF36、IPC3611SR3-F36、IPC3611SR3-PF60、IPC3611SR3-F60
	IPC3611ER3 series: IPC3611ER3-PF28、IPC3611ER3-F28、IPC3611ER3-PF36、IPC3611ER3-F36、IPC3611ER3-PF60、IPC3611ER3-F60
	IPC3612SR3 series: IPC3612SR3-PF28、IPC3612SR3-F28、IPC3612SR3-PF36、IPC3612SR3-F36、IPC3612SR3-PF60、IPC3612SR3-F60
	IPC3612ER3 series: IPC3612ER3-PF28、IPC3612ER3-F28、IPC3612ER3-PF36、IPC3612ER3-F36、IPC3612ER3-PF60、IPC3612ER3-F60
	IPC2211SR3 series: IPC2211SR3-PF36、IPC2211SR3-F36、IPC2211SR3-PF60、IPC2211SR3-F60、IPC2211SR3-PF120、IPC2211SR3-F120

	IPC2211ER3 series: IPC2211ER3-PF36、IPC2211ER3-F36、 IPC2211ER3-PF60、IPC2211ER3-F60、IPC2211ER3-PF120、 IPC2211ER3-F120
	IPC2212SR3 series: IPC2212SR3-PF36、IPC2212SR3-F36 IPC2212SR3-PF60、IPC2212SR3-F60、IPC2212SR3-PF120、 IPC2212SR3-F120
	IPC2212ER3 series: IPC2212ER3-PF36、IPC2212ER3-F36、 IPC2212ER3-PF60、IPC2212ER3-F60、IPC2212ER3-PF120、 IPC2212ER3-F120
Target file name	IPC_D1201-B5019P01D1604.zip

2 Feature Change Description

- 1."Forgot password" function in home page.
- 2.Login with IPv6 address.
- 3.Custom OSD color.
- 4.Default address changed to 192.168.1.13.
- 5.One-click to restore factory default settings.
- 6.Added auto-defog.
- 7.Added password retrieval in home page.


3 Version Upgrade Procedure

3.1 Upgrade Overview

3.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

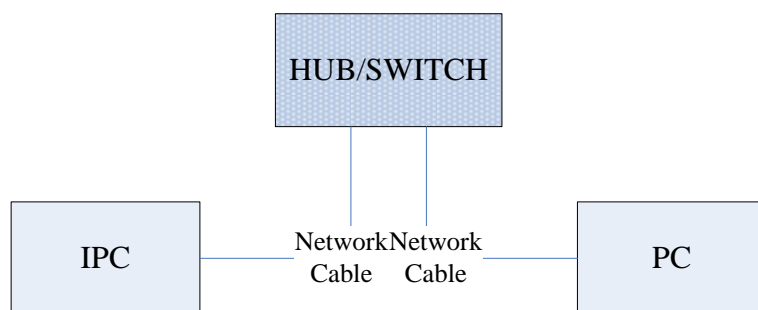

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

3.1.2 Version Upgrade Modes

You can upgrade through the Web.

3.2 Upgrade Procedure

3.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

The screenshot displays the 'Device Maintenance' web interface with the following sections:

- Firmware Upgrade:** Includes an 'Upgrade File' text box, a 'Browse...' button, an 'Upgrade' button, and an unchecked checkbox for 'Upgrade Boot Program'.
- Device Restart:** Features a 'Restart' button with the text 'Restart the device.', an unchecked checkbox for 'Enable Auto Restart', a dropdown menu set to 'Each Day', a time input field set to '02:00:00', and an 'OK' button.
- Config Management:** Contains a 'Default' button with the text 'Keep current network and user settings and restore other settings to defaults.', an 'Importing' text box with a 'Browse...' button and an 'Import' button, and an 'Exporting' text box containing 'C:\Users\Desktop\lftp' with a 'Browse...' button and an 'Export' button.
- Diagnosis Info:** Shows a 'Storage Path' text box containing 'C:\Users\MyLocalFiles\Debug\', a 'Browse...' button, and a 'Download' button.

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_D1201-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.