IPC_D1207-B0001P71D1812 Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_D1207-B0001P71D1812

Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for

IPC_D1207-B0001P71D1812.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

1 Version Information	3
1.1 Version Number·····	3
1.2 Release History ·····	3
1.3 Version Mapping Table·····	3
2 Feature Change Description·····	3
3 Version Upgrade Description ·····	
4 Version Upgrade Procedure ·····	5
4.1 Upgrade Overview······	5
4.1.1 Version Upgrade Environment······	5
4.1.2 Version Upgrade Modes······	
4.2 Upgrade Procedure	
4.2.1 Upgrade Through the Web	
4.Z. I UDUIAUE IIIIUUUII IIIE WED	

1 Version Information

1.1 Version Number

IPC_D1207-B0001P71D1812

1.2 Release History

Table1Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_D1207-B0001P71D1812	IPC_D1207-B0001P70D1812	2021-07-19	Improved release

Table2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR	B3328P36

1.3 Version Mapping Table

Table3Product models and corresponding versions

Product Series	IPC Series	
Series	IPC2122LR3-F40W-E、IPC-B112	
Models	IPC2122LR3 series: IPC2122LR3-F40W-E IPC-B112 series: IPC-B112-F40W	
Target file name	IPC_D1207-B0001P71D1812.zip	

2 Feature Change Description

P71D1812:

None

P70D1812:

None

P69D1812:

ltem	Feature	Description
Newly added features	New add model	IPC-B112-F40W
Improved features	None	None
Deleted features	None	None

P67D1812:

Item	Feature	Description
Newly added features	Strong password login	IP camera requires a strong password 1. After default password is entered at first login, a pop-up window leads the user to change the password, and only accepts a strong password. 2. Requires the user to change password if a weak or medium password is used to login. 3. A strong password is required when changing password. 4. Friendly password mode is removed. 5. A strong password shall include at least nine characters comprising all three types: digits, letters, and special characters. Both uppercase and lowercase letters are supported. 6. The default password changes to 123456 (admin was supported previously).
Improved features	None	None
Deleted features	None	None

3 Version Upgrade Description

None.


4 Version Upgrade Procedure

4.1 Upgrade Overview

4.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure1Network architecture

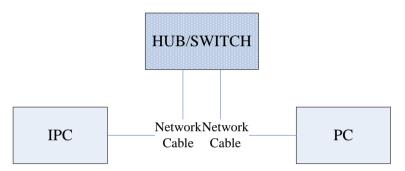

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.


4.1.2 Version Upgrade Modes

You can upgrade through the Web.

4.2 Upgrade Procedure

4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click Setup>Maintenance>Device Maintenance. The Device Maintenance page is displayed.

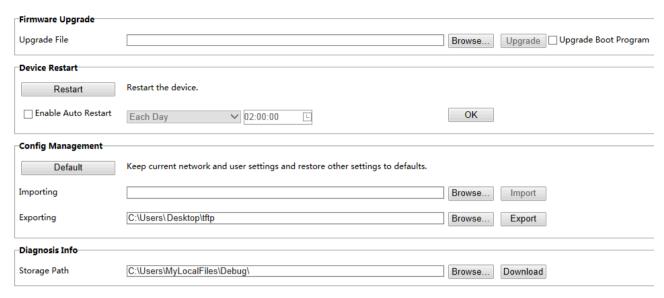

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_D1202-XXXXX.zip, and then click **Open.**
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2021, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without priorwritten consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.