# IPC\_E5101-B5010D1509 Release Notes

Zhejiang Uniview Technologies Co., Ltd

# IPC\_E5101-B5010D1509

## **Release Notes**

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for

IPC\_E5101-B5010D1509.

#### Acronym:

Acronym	Full Name
IPC	IP Camra

# Content

1 Version Information······	3
1.1 Version Number·····	3
1.2 Release History ·····	3
1.3 Version Mapping Table·····	3
2 Feature Change Description······	3
3 Usage Notes ·····	3
4 Version Upgrade Procedure ······	3
4.1 Upgrade Overview·····	3
4.1.1 Version Upgrade Environment·····	3
4.1.2 Version Upgrade Modes·····	4
4.2 Upgrade Procedure ·····	4
4.2.1 Upgrade Through the Web ······	4

## 1 Version Information

### 1.1 Version Number

IPC\_E5101-B5010D1509

## 1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_E5101-B5010D1509	IPC_E5101_IN_Eng-B150801	2015-10-29	Improved relese

## 1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR-B200-E4@32	B3115P30
NVR304-32E	B3115P30

#### Table 3 Product models and corresponding versions

Product Series	IPC Series	Initial Version	
Series	IPC232XER、IPC232XEBR		
Models	IPC232XER: IPC2321ER-P、IPC2322ER-P	B0003IN141101	
	IPC232XEBR: IPC2321EBR-P、IPC2322EBR-P		
Target file name	IPC_E5101-B5010D1509.zip		

# 2 Feature Change Description

- 1.OSD date and time displayed in different lines.
- 2. Triggered actions of stand-alone devices include edge storage (in SD card).

## 3 Usage Notes

None.


# 4 Version Upgrade Procedure

## 4.1 Upgrade Overview

#### 4.1.1 Version Upgrade Environment

#### 1. Network Architecture for Upgrade

Figure 1 Network architecture

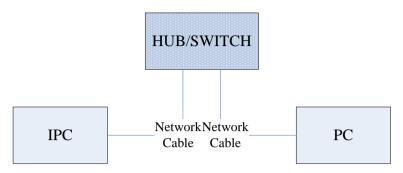

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.


#### 4.1.2 Version Upgrade Modes

You can upgrade through the Web.


## 4.2 Upgrade Procedure

#### 4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password:123456).
- (2) Click Setup > Maintenance > Device Maintenance. The Device Maintenance page is displayed.

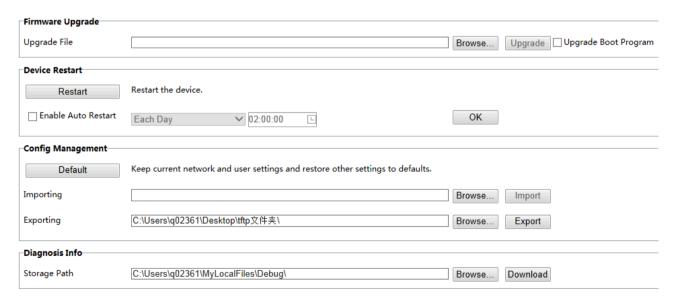

- (3) Click **Browse** in the **Software Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC\_E5101-XXXXX.zip, and then click **Open.**
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.

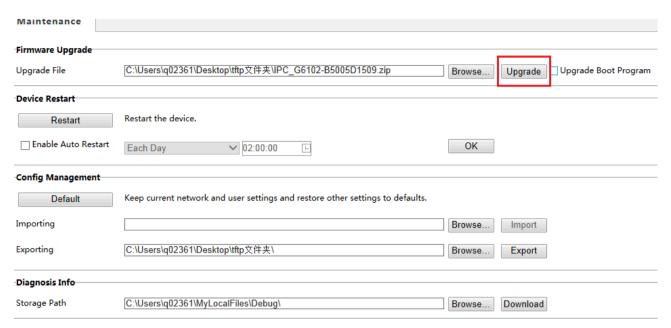

(5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2015, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.