IPC_E5101-B5012P10D1610 Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_E5101-B5012P10D1610

Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for

IPC_E5101-B5012P10D1610.

Acronym:

Acronym	Full Name
IPC	IP Camra

Content

1 Version Information	3
1.1 Version Number·····	3
1.2 Release History ·····	3
1.3 Version Mapping Table·····	3
2 Feature Change Description · · · · · · · · · · · · · · · · · · ·	4
3 Version Upgrade Procedure ······	4
3.1 Upgrade Overview·····	4
3.1.1 Version Upgrade Environment·····	4
3.1.2 Version Upgrade Modes·····	4
3.2 Upgrade Procedure ·····	5
3.2.1 Upgrade Through the Web ······	5

1 Version Information

1.1 Version Number

IPC_E5101-B5012P10D1610

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_E5101-B5012P10D1610	IPC_E5101-B5012P07D1603	2016-12-8	Improved relese

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR201-08LP	B2316P05
NVR-B100-E	B2216P05
NVR308-64E	B3116P05

Table 3 Product models and corresponding versions

Product Series	IPC Series Initial Ve	
Series	IPC232XER、IPC232XEBR	
Models	IPC232XER: IPC2321ER-P \ IPC2322ER-P \ IPC2321ER-S \ IPC2322ER-S	B0003IN141101
	IPC232XEBR: IPC2321EBR-P、IPC2322EBR-P	
Target file name	IPC_E5101-B5012P10D1610.zip	

2 Feature Change Description

Item	Feature	Description
	CPU utilization	Provides the diagnostic to record the information of CPU utilization.
Newly added	Forgot password	Provides the tips of request password in Login Web.
features Added detection mode	Added motion detection area configuration by grid.	
Improved features	Images	Improved images.
Deleted features	None	None


3 Version Upgrade Procedure

3.1 Upgrade Overview

3.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

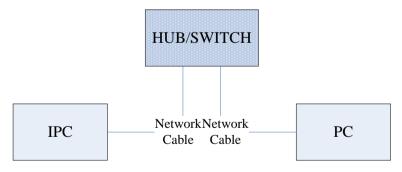

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

3.1.2 Version Upgrade Modes

You can upgrade through the Web.


3.2 Upgrade Procedure

3.2.1 Upgrade Through the Web

- Log in to the Web interface as admin (default password:123456).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.



- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_E5101-XXXXX.zip, and then click **Open.**
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.

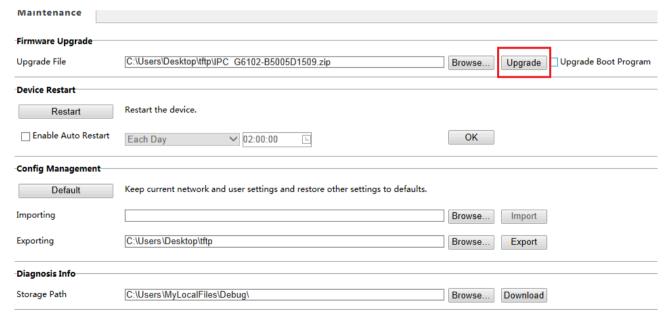

(5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

 $\hbox{@ 2014-2016},$ Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.