

IPC_G6101-B5006D1511

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_G6101-B5006D1511 Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_G6101-B5006D1511.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

- 1 Version Information..... 3**
 - 1.1 Version Number3
 - 1.2 Release History3
 - 1.3 Version Mapping Table.....3
- 2 Feature Change Description 3**
- 3 Version Upgrade Procedure 4**
 - 3.1 Upgrade Overview4
 - 3.1.1 Version Upgrade Environment.....4
 - 3.2 Upgrade Procedure4
 - 3.2.1 Upgrade Through the Web4

1 Version Information

1.1 Version Number

IPC_G6101-B5006D1511

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_G6101-B5006D1511	IPC_G6101-B5005D1509	2015-12-15	improved release

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR201-08LP	NVR201_202-B2316P05
NVR-B100-E	NVR204_208-B2216P05
NVR308-64E	NVR308_B3116P05

Table 3 Product models and corresponding versions

Product Series	IPC Series	Initial Version
Series	IPC2121SR3、IPC2122	
Type	IPC2121SR3 Series: IPC2121SR3-PF36、IPC2121SR3-PF60、IPC2121SR3-PF120	B150501
	IPC2122SR3 Series: IPC2122SR3-PF36、IPC2122SR3-PF60、IPC2122SR3-PF120	
Target file name	IPC_G6101-B5006D1511.zip	

2 Feature Change Description

New features:

- 1.Added watermark to streams.
- 2.Added network diagnosis for uplink bandwidth.
- 3.Added auto scene switch.
- 4.Added timed snapshot.

Solved issues:

1. Bug fixes.


3 Version Upgrade Procedure

3.1 Upgrade Overview

3.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

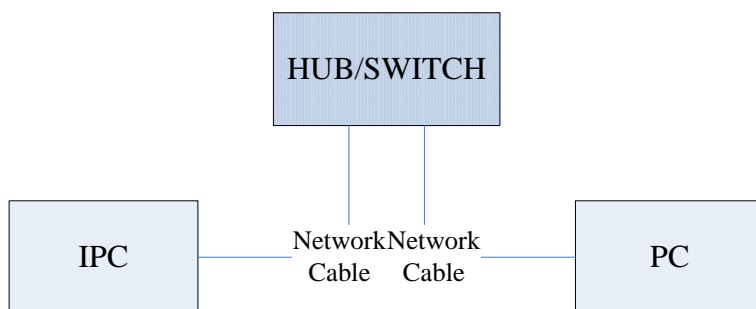

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

3.2 Upgrade Procedure

3.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

Firmware Upgrade

Upgrade File Upgrade Boot Program

Device Restart

Restart the device.

Enable Auto Restart

Config Management

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

Diagnosis Info

Storage Path

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_G6101-XXXXX.zip, and then click **Open**.

- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2015, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.