

IPC_G6101-B5007P01D1602

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_G6101-B5007P01D1602 Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_G6101-B5007P01D1602.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

1 Version Information	3
1.1 Version Number	3
1.2 Release History	3
1.3 Version Mapping Table	3
2 Feature Change Description	3
2.1 New feature	3
2.2 Solved issue.....	4
3 Version Upgrade Procedure	4
3.1 Upgrade Overview	4
3.1.1 Version Upgrade Environment	4
3.2 Upgrade Procedure	4
3.2.1 Upgrade Through the Web	4

1 Version Information

1.1 Version Number

IPC_G6101-B5007P01D1602

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_G6101-B5007P01D1602	IPC_G6101-B5006D1511	2016-4-1	improved release

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR-B200-E4@32	B3117
NVR201-08LP	R2317

Table 3 Product models and corresponding versions

Product Series	IPC Series
Series	IPC2121SR3、IPC2122、IPC321SR3、IPC322ER3、IPC312SR
Type	IPC2121SR3 series: IPC2121SR3-PF36、IPC2121SR3-PF60、IPC2121SR3-PF120
	IPC2122SR3 series: IPC2122SR3-PF36、IPC2122SR3-PF60、IPC2122SR3-PF120
	IPC321SR3 series : IPC321SR3-VSPF28、IPC321SR3-VSPF40、IPC321SR3-VSPF60
	IPC322ER3 series : IPC322ER3-DVPF28、IPC322ER3-DVPF36、IPC322ER3-DVPF60
	IPC312SR series : IPC312SR-VPF36、IPC312SR-VPF28
Target file name	IPC_G6101-B5007P01D1602.zip

2 Feature Change Description

2.1 New feature

1.Added alarm suppression and restore function in distribution and international product

interface.

2.Changed Web/client password policy (Internet weak password access control).

2.2 Solved issue

1.Alarm triggered actions unavailable when SSL is enabled.

2.Live view unavailable in ONVIF Device Manager.


3 Version Upgrade Procedure

3.1 Upgrade Overview

3.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

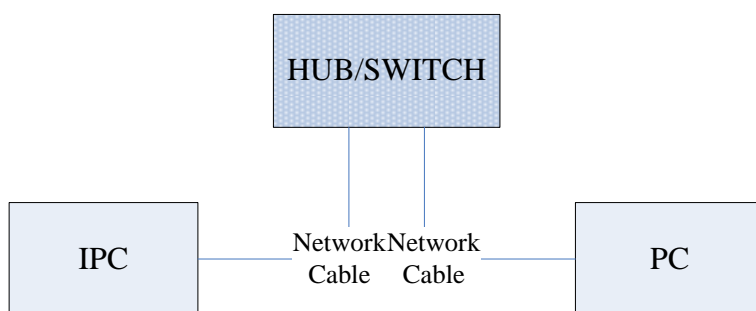

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

3.2 Upgrade Procedure

3.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

Firmware Upgrade

Upgrade File Upgrade Boot Program

Device Restart

Restart the device.

Enable Auto Restart

Config Management

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

Diagnosis Info

Storage Path

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_G6101-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2016, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.