

IPC\_G6102-B150801

## Release Notes

Zhejiang Uniview Technologies Co., Ltd

# IPC\_G6102-B150801 Release Notes

**Keywords:** Version information, version upgrade

**Abstract:** This document provides detailed version information and upgrade procedure for IPC\_G6102-B150801.

**Acronym:**

Acronym	Full Name
IPC	IP Camera

# Content

- 1 Version Information..... 3**
  - 1.1 Version Number .....3
  - 1.2 Release History .....3
  - 1.3 Version Mapping Table.....3
- 2 Version Upgrade Procedure ..... 3**
  - 2.1 Upgrade Overview.....3
    - 2.1.1 Version Upgrade Environment.....4
  - 2.2 Upgrade Procedure .....4
    - 2.2.1 Upgrade Through the Web .....4

# 1 Version Information

## 1.1 Version Number

IPC\_G6102-B150801

## 1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_G6102-B150801	IPC_G6102_IN_Eng-B150701P05	2015-09-22	improved release

## 1.3 Version Mapping Table

Table 2 Version mapping table

产品配套项目	版本号（对外）	说明
NVR202-08EP	B2315P05	无
NVR201-04E	B2315P05	无
NVR201-04LP	B2315P05	无
NVR201-08L	B2315P05	无
NVR202-08E	B2315P05	无
NVR201-04EP	B2315P05	无

Table 3 Product models and corresponding versions

Product Series	IPC Series	Initial Version
Series	IPC2121SR3	
Type	IPC2121SR3 Series: IPC2124SR3-DPF36、 IPC2124SR3-DPF60 、 IPC2124SR3-DPF120	B150701P05
Target file name	IPC_G6102-B150801.zip	


# 2 Version Upgrade Procedure

## 2.1 Upgrade Overview

## 2.1.1 Version Upgrade Environment

### 1. Network Architecture for Upgrade

Figure 1 Network architecture

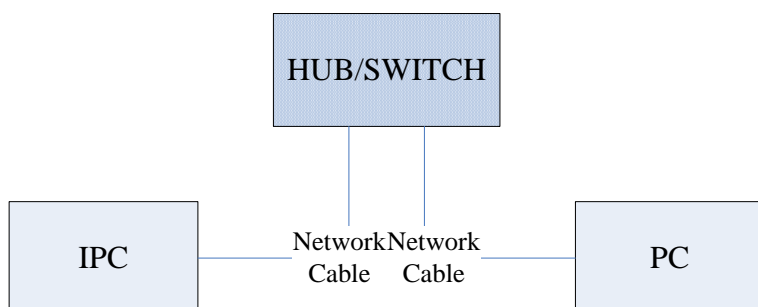


As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

## 2.2 Upgrade Procedure

### 2.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: admin).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

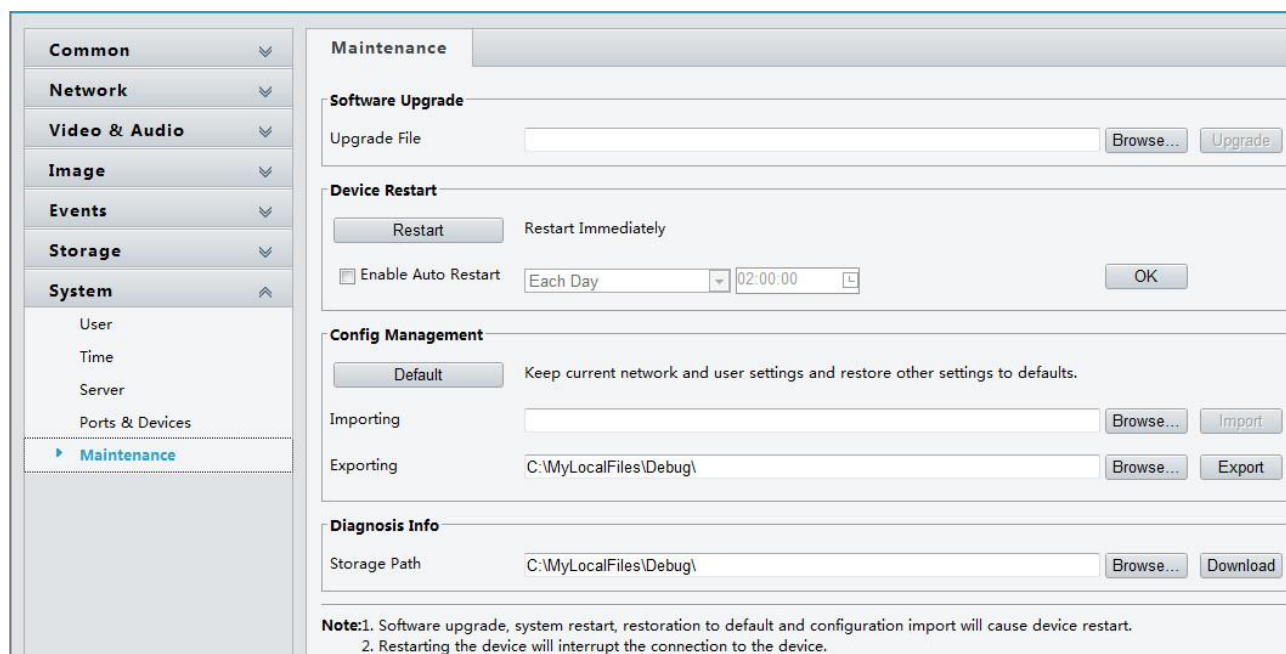

- (3) Click **Browse** in the **Software Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC\_G6102\_IN\_Eng-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.

- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2015, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.