

IPC_G6102-B5008D1512

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_G6102-B5008D1512 Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_G6102-B5008D1512.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

1 Version Information	3
1.1 Version Number	3
1.2 Release History	3
1.3 Version Mapping Table	3
2 Feature and Change Description	3
3 Version Upgrade Description	4
4 Version Upgrade Procedure	4
4.1 Upgrade Overview	4
4.1.1 Version Upgrade Environment	4
4.2 Upgrade Procedure	4
4.2.1 Upgrade Through the Web	4

1 Version Information

1.1 Version Number

IPC_G6102-B5008D1512

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_G6102-B5008D1512	IPC_G6102-B5007D1511	2016-1-21	improved release

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR202-08EP	B3201P12
NVR201-04E	B2311P05
NVR304-32E	B3116
NVR208-16	B2311P05

Table 3 Product models and corresponding versions

Product Series	IPC Series
Series	IPC2124SR3, IPC324ER3, IPC3614SR3, IPC314SR
Models	IPC2124SR3 series: IPC2124SR3-DPF36,IPC2124SR3-DPF60,IPC2124SR3-DPF120
	IPC324ER3 series: IPC324ER3-DVPF28,IPC324ER3-DVPF36,IPC324ER3-DVPF60
	IPC3614SR3 series: IPC3614SR3-DPF28,IPC3614SR3-DPF36,IPC3614SR3-DPF60 IPC3614SR3-DPF28M,IPC3614SR3-DPF36M,IPC3614SR3-DPF60M
	IPC314SR series: IPC314SR-DVPF28,IPC314SR-DVPF36
Target file name	IPC_G6102-B5008D1512.zip

2 Feature and Change Description

- 1.RTSP authentication enabled by default.
- 2.Optimized indoor color image quality.
- 3.Added snapshot.
- 4.Optimized tampering detection functionality.

3 Version Upgrade Description

Version B5006D1510 supports normal upgrade. B5006D1510 and later versions cannot be downgraded to earlier versions, e.g., B150801. If version downgrade is really required, contact our customer service staff.


4 Version Upgrade Procedure

4.1 Upgrade Overview

4.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

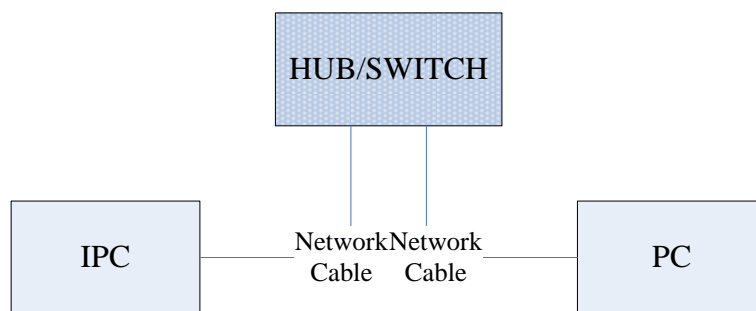

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

4.2 Upgrade Procedure

4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup > System > Maintenance**. The **Maintenance** page is displayed.

Firmware Upgrade

Upgrade File Upgrade Boot Program

Device Restart

Restart the device.

Enable Auto Restart

Config Management

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

Diagnosis Info

Storage Path

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_G6102 -XXXXX.zip, and then click **Open**.

Maintenance

Firmware Upgrade

Upgrade File Upgrade Boot Program

Device Restart

Restart the device.

Enable Auto Restart

Config Management

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

Diagnosis Info

Storage Path

- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.