

IPC_G6107-B0001P91D1806

Release Notes

IPC_G6107-B0001P91D1806

Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_G6107-B0001P91D1806.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

1 Version Information.....	3
1.1 Version Number.....	3
1.2 Release History	3
1.3 Version Mapping Table.....	3
2 Feature Change Description	4
3 Version Upgrade Description	5
4 Version Upgrade Procedure	5
4.1 Upgrade Overview	5
4.1.1 Version Upgrade Environment.....	5
4.1.2 Version Upgrade Modes.....	6
4.2 Upgrade Procedure	6
4.2.1 Upgrade Through the Web	6

1 Version Information

1.1 Version Number

IPC_G6107-B0001P91D1806

1.2 Release History

Table1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_G6107-B0001P91D1806	IPC_G6107-B0001P89D1806	2020-12-28	Initial release

Table2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR	B3127P10

1.3 Version Mapping Table

Table3 Product models and corresponding versions

Product Series	IPC Series
Series	IPC2128LR3 、 IPC3618LR3 、 IPC328LR3 、 IPC2124SR3 、 IPC325SR3 、 IPC3615SR3 、 IPC324SR3 、 IPC2125SR3 、 IPC3616LR3 、 IPC354SR3 、 IPC2324SBR5、 IPC2325SBR5、 IPC3534SR3、 IPC3535SR3、 IPC3634SR3、 IPC3635SR3、 IPC
Models	IPC2128LR3 series: IPC2128LR3-DPF28M-F、 IPC2128LR3-DPF40M-F IPC2128LR3-PF40M-D
	IPC3618LR3 series: IPC3618LR3-DPF28-F、 IPC3618LR3-DPF40-F
	IPC328LR3 series: IPC328LR3-DVSPF28-F、 IPC328LR3-DVSPF40-F
	IPC2124SR3 series: IPC2124SR3-DPF28M-F、 IPC2124SR3-DPF40M-F
	IPC3614SR3 series: IPC3614SR3-ADPF28-F、 IPC3614SR3-ADPF40-F
	IPC325SR3 series: IPC325SR3-DVPF28-F、 IPC325SR3-DVPF40-F

	IPC3615SR3 series: IPC3615SR3-ADPF28-F、IPC3615SR3-ADPF40-F
	IPC324SR3 series: IPC324SR3-DVPF28-F、IPC324SR3-DVPF40-F
	IPC2125SR3 series IPC2125SR3-ADPF28M-F、IPC2125SR3-ADPF40M-F
	IPC354SR3 series: IPC354SR3-ADNPF28-F
	IPC3616LR3 series: IPC3616LR3-DPF28M
	IPC2324SBR5 series: IPC2324SBR5-DPZ-F
	IPC2325SBR5 series: IPC2325SBR5-DPZ-F
	IPC3534SR3 series: IPC3534SR3-DVPZ-F、IPC3534SR3-DVNPZ-F
	IPC3535SR3 series: IPC3535SR3-DVPZ-F
	IPC3634SR3 series: IPC3634SR3-ADPZ-F
	IPC3635SR3 series: IPC3635SR3-ADPZ-F
	IPC series: IPC-T115-PF28-M、IPC-T118-DPF28-M
Target file name	IPC_G6107-B0001P91D1806.zip

2 Feature Change Description

P91D1806:

None

P89D1806:

None

P87D1806:

Item	Feature	Description
Newly added features	Human body detection triggered actions	Add actions to trigger for human body detection: FTP, email, recording edge storage, image edge storage, alarm output.
	4MP product resolution change	Resolution of 4MP products changes from 2592*1520 to 2688*1520.
	Intrusion detection	Add intrusion detection alarm, and the actions to trigger are same as other alarms.
	Strong password login	The default password changes to 123456 (admin was supported previously) ; After login, the user is required to change the password into a strong one. A strong password shall include at least nine characters comprising all three types: digits, letters, and special characters.
	WDR enable/disable sensitivity	Add WDR Open Sensitivity and WDR Close Sensitivity settings.
Improved features	None	None
Deleted features	None	None

3 Version Upgrade Description

None.


4 Version Upgrade Procedure

4.1 Upgrade Overview

4.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure1Network architecture

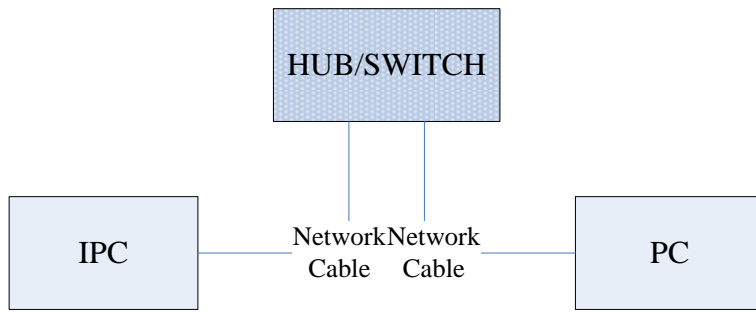

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

4.1.2 Version Upgrade Modes

You can upgrade through the Web.

4.2 Upgrade Procedure

4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup>Maintenance>Device Maintenance**. The **Device Maintenance** page is displayed.

Firmware Upgrade	
Upgrade File	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upgrade"/> <input type="checkbox"/> Upgrade Boot Program
Device Restart	
<input type="button" value="Restart"/>	Restart the device.
<input type="checkbox"/> Enable Auto Restart	<input type="text" value="Each Day"/> <input type="text" value="02:00:00"/> <input type="button" value="OK"/>
Config Management	
<input type="button" value="Default"/>	Keep current network and user settings and restore other settings to defaults.
Importing	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Import"/>
Exporting	<input type="text" value="C:\Users\Desktop\lftp"/> <input type="button" value="Browse..."/> <input type="button" value="Export"/>
Diagnosis Info	
Storage Path	<input type="text" value="C:\Users\MyLocalFiles\Debug\"/> <input type="button" value="Browse..."/> <input type="button" value="Download"/>

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_G6107-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

No part of this manual may be reproduced or transmitted in any form or by any means without priorwritten consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.