

IPC\_G6201-B0001P66D1911

## Release Notes

Zhejiang Uniview Technologies Co., Ltd

# IPC\_G6201-B0001P66D1911

## Release Notes

**Keywords:** Version information, version upgrade

**Abstract:** This document provides detailed version information and upgrade procedure for IPC\_G6201-B0001P66D1911.

**Acronym:**

Acronym	Full Name
IPC	IP Camera

# Content

<b>1 Version Information</b> .....	<b>3</b>
1.1 Version Number .....	3
1.2 Release History .....	3
1.3 Version Mapping Table .....	3
<b>2 Feature Change Description</b> .....	<b>3</b>
<b>3 Version Upgrade Description</b> .....	<b>3</b>
<b>4 Version Upgrade Procedure</b> .....	<b>3</b>
4.1 Upgrade Overview .....	3
4.1.1 Version Upgrade Environment .....	3
4.1.2 Version Upgrade Modes .....	4
4.2 Upgrade Procedure .....	4
4.2.1 Upgrade Through the Web .....	4

# 1 Version Information

## 1.1 Version Number

IPC\_G6201-B0001P66D1911

## 1.2 Release History

Table1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_G6201-B0001P66D1911	NA	2020-09-30	Initial release

Table2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR	B3111.29.29.200928

## 1.3 Version Mapping Table

Table3 Product models and corresponding versions

Product Series	IPC Series
Series	<b>IPC322SS</b> 、 <b>IPC3612SS</b> 、 <b>IPC2122SS</b>
Models	<b>IPC322SS series:</b> IPC322SS-DF28K-I0、IPC322SS-DF40K-I0 <b>IPC3612SS series:</b> IPC3612SS-ADF28KM-I0、IPC3612SS-ADF40KM-I0 <b>IPC2122SS series:</b> IPC2122SS-ADF28KM-I0、IPC2122SS-ADF40KM-I0
Target file name	IPC_G6201-B0001P66D1911.zip

## 2 Feature Change Description

None.

## 3 Version Upgrade Description

None.


## 4 Version Upgrade Procedure

### 4.1 Upgrade Overview

#### 4.1.1 Version Upgrade Environment

## 1. Network Architecture for Upgrade

Figure1Network architecture

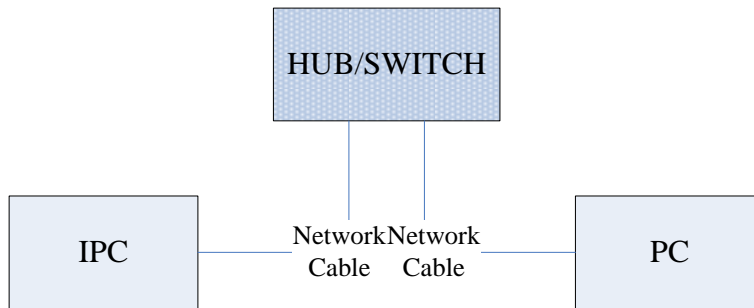

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

### 4.1.2 Version Upgrade Modes

You can upgrade through the Web.

## 4.2 Upgrade Procedure

### 4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup>Maintenance>Device Maintenance**. The **Device Maintenance** page is displayed.

<b>Firmware Upgrade</b>	
Upgrade File	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upgrade"/> <input type="checkbox"/> Upgrade Boot Program
<b>Device Restart</b>	
<input type="button" value="Restart"/>	Restart the device.
<input type="checkbox"/> Enable Auto Restart	<input type="text" value="Each Day"/> <input type="text" value="02:00:00"/> <input type="button" value="OK"/>
<b>Config Management</b>	
<input type="button" value="Default"/>	Keep current network and user settings and restore other settings to defaults.
Importing	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Import"/>
Exporting	<input type="text" value="C:\Users\Desktop\lftp"/> <input type="button" value="Browse..."/> <input type="button" value="Export"/>
<b>Diagnosis Info</b>	
Storage Path	<input type="text" value="C:\Users\MyLocalFiles\Debug\"/> <input type="button" value="Browse..."/> <input type="button" value="Download"/>

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC\_G6201-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.

- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2020,Zhejiang Uniview Technologies Co., Ltd.All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without priorwritten consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.