

IPC\_HCMN1102-F5026D1509

## Release Notes

Zhejiang Uniview Technologies Co., Ltd

# IPC\_HCMN1102-F5026D1509

## Release Notes

**Keywords:** Version information, version upgrade

**Abstract:** This document provides detailed version information and upgrade procedure for IPC\_HCMN1102-F5026D1509.

**Acronym:**

Acronym	Full Name
IPC	IP Camera

# Content

<b>1 Version Information</b> .....	<b>3</b>
1.1 Version Number .....	3
1.2 Release History .....	3
1.3 Version Mapping Table .....	3
<b>2 Feature Change Description</b> .....	<b>3</b>
<b>3 Version Upgrade Procedure</b> .....	<b>4</b>
3.1 Upgrade Overview .....	4
3.1.1 Version Upgrade Environment .....	4
3.1.2 Version Upgrade Modes .....	4
3.2 Upgrade Procedure .....	4
3.2.1 Upgrade Through the Web .....	4

# 1 Version Information

## 1.1 Version Number

IPC\_HCMN1102-F5026D1509

## 1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_HCMN1102-F5026D1509	IPC_HCMN1102_IN_Eng-F150801	2015-11-5	Improved release

## 1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR-B200-E4@32	B3115P30
NVR304-32E	B3115P30

Table 3 Product models and corresponding versions

Product Series	IPC Series	Initial Version
Series	IPC6221ER, IPC6221LR,IPC6222ER,IPC641E,IPC642E	F141201
Models	<b>IPC6221ER series:</b> IPC6221ER-X20,IPC6221ER-X20P, IPC6221ER-X30, IPC6221ER-X30P,	
	<b>IPC6221LR series:</b> IPC6221LR-X20S, IPC6221LR-X20SP	
	<b>IPC6222ER series:</b> IPC6222ER-X20, IPC6222ER-X20P, IPC6222ER-X30, IPC6222ER-X30P	
	<b>IPC641E series:</b> IPC641E-X22I-IN, IPC641E-X22-IN, IPC641E-X22IR-IN	
	<b>IPC642E series:</b> IPC642E-X22I-IN, IPC642E-X22-IN, IPC642E-X22IR-IN	
Target file name	IPC_HCMN1102-F5026D1509.zip	

# 2 Feature Change Description

NTSC/PAL switch for BNC output;

Bug fixes;


## 3 Version Upgrade Procedure

### 3.1 Upgrade Overview

#### 3.1.1 Version Upgrade Environment

##### 1. Network Architecture for Upgrade

Figure 1 Network architecture

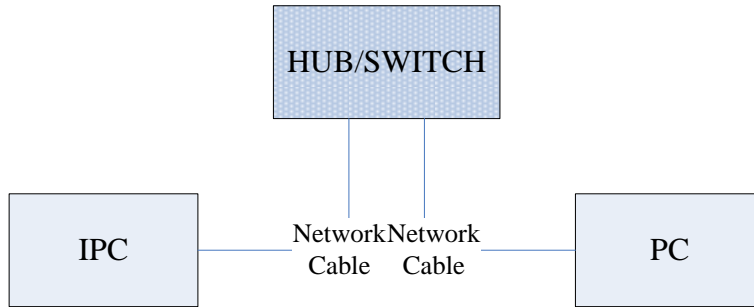

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

#### 3.1.2 Version Upgrade Modes

You can upgrade through the Web.

### 3.2 Upgrade Procedure

#### 3.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password:123456).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

---

**Firmware Upgrade**

Upgrade File     Upgrade Boot Program

---

**Device Restart**

Restart the device.

Enable Auto Restart

---

**Config Management**

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

---

**Diagnosis Info**

Storage Path

---

- (3) Click **Browse** in the **Software Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC\_HCMN1102 -XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2015, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.