

IPC_HCMN1102-F5027D1511

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_HCMN1102-F5027D1511

Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_HCMN1102-F5027D1511.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

1 Version Information	3
1.1 Version Number	3
1.2 Release History	3
1.3 Version Mapping Table	3
2 Feature Change Description	4
3 Version Upgrade Procedure	4
3.1 Upgrade Overview	4
3.1.1 Version Upgrade Environment	4
3.1.2 Version Upgrade Modes	4
3.2 Upgrade Procedure	4
3.2.1 Upgrade Through the Web	4

1 Version Information

1.1 Version Number

IPC_HCMN1102-F5027D1511

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_HCMN1102-F5027D1511	IPC_HCMN1102-F5026D1509	2015-12-17	Improved release

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR201-08LP	B2316P05
NVR-B100-E	B2216P05
NVR308-64E	B3116P05

Table 3 Product models and corresponding versions

Product Series	IPC Series
Series	IPC6221ER, IPC6221LR,IPC6222ER,IPC641E,IPC642E, IPC6241SR, IPC6242SL, IPC6242SR
Models	IPC6221ER series: IPC6221ER-X20,IPC6221ER-X20P, IPC6221ER-X30, IPC6221ER-X30P
	IPC6221LR series: IPC6221LR-X20S, IPC6221LR-X20SP
	IPC6222ER series: IPC6222ER-X20, IPC6222ER-X20P, IPC6222ER-X30, IPC6222ER-X30P
	IPC6241SR series: IPC6241SR-X22,IPC6241SR-X30
	IPC6242SL series: IPC6242SL-X22,IPC6242SL-X33
	IPC6242SR series: IPC6242SR-X22,IPC6242SR-X30
	IPC641E series: IPC641E-X22I-IN, IPC641E-X22-IN, IPC641E-X22IR-IN
IPC642E series: IPC642E-X22I-IN, IPC642E-X22-IN, IPC642E-X22IR-IN	
Target file name	IPC_HCMN1102-F5027D1511.zip

2 Feature Change Description

- 1.Added watermark to streams.
- 2.Added network diagnosis for uplink bandwidth.
- 3.Added auto scene switch.
- 4.Added timed snapshot.


3 Version Upgrade Procedure

3.1 Upgrade Overview

3.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

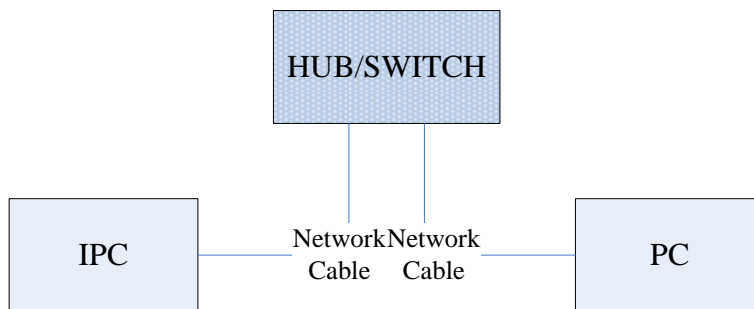

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

3.1.2 Version Upgrade Modes

You can upgrade through the Web.

3.2 Upgrade Procedure

3.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password:123456).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

Firmware Upgrade

Upgrade File Upgrade Boot Program

Device Restart

Restart the device.

Enable Auto Restart

Config Management

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

Diagnosis Info

Storage Path

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_HCMN1102 -XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.

Maintenance

Firmware Upgrade

Upgrade File Upgrade Boot Program

Device Restart

Restart the device.

Enable Auto Restart

Config Management

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

Diagnosis Info

Storage Path

- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.