IPC_Q1201_IN_Eng-B150601P01

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_Q1201_IN_Eng-B150601P01 Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_Q1201_IN_Eng-B150601P01.

Acronym:

Acronym	Full Name
IPC	IP Camra

Content

1 Version Information
1.1 Version Number ······3
1.2 Release History ······3
1.3 Version Mapping Table
2 Usage Notes ······3
3 Version Upgrade Description
3.1 Feature Upgrade Description3
3.2 Operation Change Description3
4 Version Upgrade Procedure
4.1 Upgrade Overview ······4
4.1.1 Version Upgrade Environment ······4
4.1.2 Version Upgrade Modes······4
4.2 Upgrade Procedure ······4
4.2.1 Upgrade Through the Web ······4

1 Version Information

1.1 Version Number

IPC_Q1201_IN_Eng-B150601P01

1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_Q1201_IN_Eng-B150601P01	NA	2015-08-26	Initial release

1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR202-08EP	B2312P15

Table 3 Product models and corresponding versions

Product Series	IPC Series	Initial Version
Series	IPC562E	
Models	IPC562E series: IPC562E-DUG	NA
Target file name	IPC_Q1201_IN_Eng-B150601P01.zip	

2 Usage Notes

None.

3 Version Upgrade Description

3.1 Feature Upgrade Description

None.

3.2 Operation Change Description

None.

www.uniview.com


4 Version Upgrade Procedure

4.1 Upgrade Overview

4.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

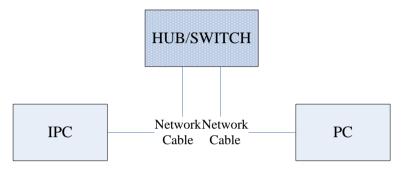

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

4.1.2 Version Upgrade Modes

You can upgrade through the Web.

4.2 Upgrade Procedure

4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: admin).
- (2) Click Setup > Maintenance > Device Maintenance. The Device Maintenance page is displayed.

Common	Maintenance			
Network	Software Upgrade			
Video & Audio	Upgrade File	· · · · · · · · · · · · · · · · · · ·	Browse	Upgrade
PTZ				
Image	Device Restart			
Events	Restart	Restart Immediately		
Storage	Config Management			
System	Default	Keep current network and user settings and restore other settings to defaults.		
Security	Importing		Browse	Import
Time	Exporting		Brewe	
Server	exporting	C:\MyLocalFiles\Debug\	Browse	Export
Ports & Devices Maintenance	Diagnosis Info			
Maintenance	Storage Path	C:\MyLocalFiles\Debug\	Browse	Download
	Mounting Info			9
	Mounting Height (cm)	600	0	K
	Focus			
	Min. Focus Distance(cm)	100	0	K

- (3) Click **Browse** in the **Software Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_Q1201-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2015, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.