

IPC\_Q1201\_IN\_Eng-B150801P01

## Release Notes

Zhejiang Uniview Technologies Co., Ltd

## IPC\_Q1201\_IN\_Eng-B150801P01 Release Notes

**Keywords:** Version information, version upgrade

**Abstract:** This document provides detailed version information and upgrade procedure for IPC\_Q1201\_IN\_Eng-B150801P01.

**Acronym:**

Acronym	Full Name
IPC	IP Camra

# Content

<b>1 Version Information</b> .....	<b>3</b>
1.1 Version Number .....	3
1.2 Release History .....	3
1.3 Version Mapping Table .....	3
<b>2 Usage Notes</b> .....	<b>3</b>
<b>3 Version Upgrade Description</b> .....	<b>4</b>
3.1 Feature Upgrade Description .....	4
3.2 Operation Change Description .....	4
<b>4 Version Upgrade Procedure</b> .....	<b>4</b>
4.1 Upgrade Overview .....	4
4.1.1 Version Upgrade Environment .....	4
4.1.2 Version Upgrade Modes .....	4
4.2 Upgrade Procedure .....	4
4.2.1 Upgrade Through the Web .....	4

# 1 Version Information

## 1.1 Version Number

IPC\_Q1201\_IN\_Eng-B150801P01

## 1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_Q1201_IN_Eng-B150801P01	IPC_Q1201_IN_Eng-B150601P01	2015-09-24	improved release

## 1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR202-08EP	B2315P05
NVR201-04E	B2315P05
NVR201-04LP	B2315P05
NVR201-08L	B2315P05

Table 3 Product models and corresponding versions

Product Series	IPC Series	Initial Version
Series	IPC562E、IPC3231ER、IPC3234SR	
Models	<b>IPC562E series:</b> IPC562E-DUG	B150601P02
	<b>IPC3231ER series:</b> IPC3231ER-DV	B150801P01
	<b>IPC3234SR series:</b> IPC3234SR-DV	
Target file name	IPC_Q1201_IN_Eng-B150801P01.zip	

# 2 Usage Notes

None.

## 3 Version Upgrade Description

### 3.1 Feature Upgrade Description

None.

### 3.2 Operation Change Description

None.


## 4 Version Upgrade Procedure

### 4.1 Upgrade Overview

#### 4.1.1 Version Upgrade Environment

##### 1. Network Architecture for Upgrade

Figure 1 Network architecture

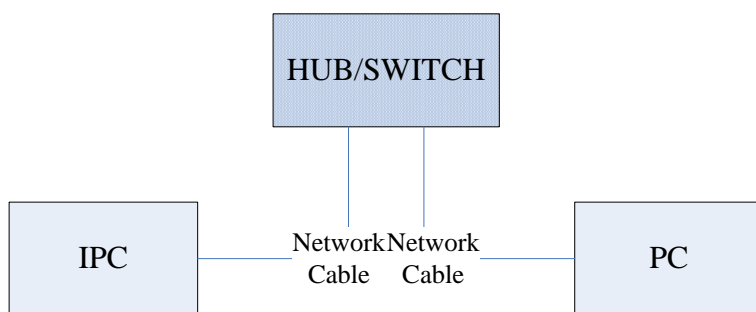

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

#### 4.1.2 Version Upgrade Modes

You can upgrade through the Web.

### 4.2 Upgrade Procedure

#### 4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: admin).
- (2) Click **Setup > Maintenance > Device Maintenance**. The **Device Maintenance** page is displayed.

**Common**

**Network**

**Video & Audio**

**PTZ**

**Image**

**Events**

**Storage**

**System**

Security

Time

Server

Ports & Devices

► **Maintenance**

**Maintenance**

**Software Upgrade**

Upgrade File

**Device Restart**

Restart Immediately

**Config Management**

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

**Diagnosis Info**

Storage Path

**Mounting Info**

Mounting Height (cm)

**Focus**

Min. Focus Distance(cm)

**Note:**1. Software upgrade, system restart, restoration to default, configuration import, and changing the minimum focus distance will cause the device to restart.  
2. Restarting the device will interrupt the connection to the device.

- (3) Click **Browse** in the **Software Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC\_Q1201-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.