B3120P11 Release Notes

Zhejiang Uniview Technologies Co., Ltd.

B3120P11 Release Notes

Keywords: Version information, usage notes, precautions.

Abstract: This document provides information about the **B3120P11** board software, including version information, usage notes, precautions, and features.

Acronym

Acronym	Full Name
NVR	Network Video Recorder

Contents

1 Version Information3
1.1 Version Number ······3
1.2 Applied Product Models ······3
1.3 Release History ······3
2 Usage Notes ······3
3 Software Features 4
4 Version Change Description
4.1 Feature Change Description4
4.2 Operation Change Description8
5 Related Documents and Delivery Method9
6 Version Upgrade Guidance 9
6.1 Precautions ······9
6.2 Upgrade Procedure ·····9
6.3 Upgrade Through the System Interface9
6.4 Upgrade Through the Web Interface10

1 Version Information

1.1 Version Number

B3120P11

1.2 Applied Product Models

Table 1 Applied Product Models

Product Models	Description
NVR308-16E	8 slots, 16-ch, H.264 and H.265, 4K ultra HD, RAID
NVR308-32E	8 slots, 32-ch, H.264 and H.265, 4K ultra HD, RAID
NVR308-64E	8 slots, 32-ch, H.264 and H.265, 4K ultra HD, RAID
NVR308-32R	8 slots, 32-ch, H.264 and H.265, 4K ultra HD, RAID, hot-pluggable disk drives
NVR308-64R	8 slots, 32-ch, H.264 and H.265, 4K ultra HD, RAID, hot-pluggable disk drives

1.3 Release History

Table 2 Released Versions

Version No.	Basic Version No.	Released On
B3120P11	B3119P22	2017-02-20
B3119P22	B3118P31	2017-01-19
B3118P31	B3118P29	2016-09-26
B3118P29	B3118P27	2016-09-10
B3118P27	B3118P26	2016-08-30
B3118P26	B3118P15	2016-08-22
B3118P15	B3117P25	2016-07-23
B3117P25	B3116P23	2016-05-25
B3116P23	B3116P20	2016-02-02
B3116P20	B3115P35	2016-01-18
B3115P35	B3115P30	2015-11-05
B3115P30	Initial release	2015-10-14

2 Usage Notes

None.

3 Software Features

Table 3	Software	Features
---------	----------	----------

Service	Feature
Audio and video decoding	H.264 and H.265, 4K resolution display, up to 16Mbps bit rate.
Data storage	Local storage of recordings in hard disk(s).
Web-based management	Web-based user interface for device configuration and management.

4 Version Change Description

4.1 Feature Change Description

Table 4 B3120P11 Feature Changes

Item	Feature	Description
New features	Certain fisheye camera models	Supports dewarping of certain fisheye camera models on NVR Web client for live view and normal playback images.
	Optimized maintenance	The size of Ping packet and captured packet is configurable.
Improved	Optimized camera configuration	Supports coping IP camera configurations of OSD, motion detection, video loss and tampering detection.
Improved features	Optimized PTZ preset	Allows the user to delete preset and only added preset will be displayed in the list.
	Optimized password recovery	Supports scanning QR code on mobile client to recover password.
Deleted features	None	None

Table 5 B3119P22 Feature Changes

Item	Feature	Description
	U-Code	U-Code is a patented technology of Uniview that accomplishes higher compression efficiency than H.264/H.265.
	NAS	Supports NAS storage device.
New features	Auto guard	Enables the PTZ camera to operate automatically as configured if no operation is performed during a certain time period. This function can avoid situations where the camera is left to monitor an incorrect scene by user's negligence.
	Multicast	Makes live view possible even when the number of connecting Web clients exceeds the limit the NVR can accommodate.
	USB Device window	Automatically displays the window when a USB storage device is plugged in during device startup or in preview status. The window can also be opened by clicking the USB icon on the screen toolbar.
	Uniview logo	Displays Uniview logo in idle preview windows. This feature is only available to Uniview version.
Improved features	Auto switch to	Automatically switches to H.265 and U-Code when connected by Uniview IPC and sends default bitrate settings to IPC.
	Copy video	Allows user to copy video compression and U-Code settings and

Zhejiang Uniview Technologies Co., Ltd.

Item	Feature	Description
	compression and U- Code settings	quickly apply them to other IPCs.
	Draw schedules	Allows users to make recording and snapshot schedules by drawing.
	Instant playback	Instant playback time is now configurable.
	Mouse operation	Allows user to adjust the moving speed of mouse pointer.
	IPC upgrade	Upgrade a batch of IPCs by cloud or USB storage device.
	Preview	Live view window's yellow boarders disappear automatically in 20 seconds if no operation is performed.
	Snapshot	The window borders flash white when taking a snapshot during live view or playback.
	Resolution	Restore default resolution by pressing and holding the scroll wheel for at least 3 seconds.
	DHCP	DHCP is enabled by default for international versions.
	Playback by tag	Allows playback by tag on Web client.
Deleted features	None	None

Table 6 B3118P15 Feature Changes

Item	Feature	Description
	N+1 hot spare	Data and service backup between devices; supports data transfer back to the working device from hot spare when the working device is restored to normal status.
	VCA	Work with smart IPC to achieve VCA functions (smart detection and smart search), enhanced playback by event.
	Fisheye	Supports connection to certain models of Uniview fisheye cameras.
Newly	RTSP-based connection to IPC	Adds IPC by RTSP for live view and playback (IPC configuration not supported).
added features	RTSP URL format on screen	Displays RTSP URL format and a description, and users can view live video from a channel of the NVR by visiting the corresponding URL using an RTSP-enabled device.
	Ucode	Uniview's private encoding rules which greatly improve the compression rate compared with average encoding modes.
	IPv6	Supports IPv6 and offers three options to set an IPv6 address: Manual, DHCP, Router Advertisement.
	3G/4G	Enables connection to the Internet through cellular network (WCDMA, CDMA2000, TD-SCDMA, 4G LTE) using a dongle.
	Quick view of serial number	View the device's serial number by double-clicking the lower left corner of the login dialog box as admin.
	Improved encoding configuration	Automatically refreshes encoding configurations; automatically changes bit rate as the user changes resolution and frame rate.
Improved features	One-click cancellation of binding to EZCloud	Allows the user to cancel binding to EZCloud account by clicking the Delete button without visiting the EZCloud website.
	Enhanced ease of use	Displays device operation time, camera offline cause, a system message when the USB storage device is unplugged, and added the Camera Name column under Advanced.
	Enhanced corridor	Added 4/9/10/12/16 corridor modes on the system interface.

	mode	
	Added OSD configurations	Added font color and size options for OSD configuration.
	Optimized playback	Supports reverse playback; max. 256x playback speed on the system interface, and 16x playback speed on the web interface; with apparently improved fluency at low playback speed.
	Optimized alarm- triggered preview	Changes alarm-triggered preview from "sequence display three times" to "display from alarm is reported till alarm is cleared.
Deleted features	None	None

Table 7 B3117P25 Feature Changes

Item	Feature	Description
	Independent video output	Independent play and playback of different live videos; dual-preview images.
	Cache post recording	Videos are saved to the SD card if connection to the IP camera is lost. When the camera gets back online, videos saved on the SD card will be transmitted and stored on the NVR. No configuration is required.
	Disk group management	Allows the user to designate disks to different groups and specify different disk groups to store video from different cameras, making storage space calculation for each camera unnecessary.
Newly	Redundant storage	Extra copy for important recordings.
added features	Improved colors for the user interface	Uses Uniview standardized style to improve the user interface and enhance the identification of icons and symbols.
	Web-based control of system interface	Allows the user to change image resolution and preview sequence on the system interface through the Web interface.
	Alarm-triggered pop-up window	A window pops up on the system interface to alert the user when an alarm occurs.
	ARP protection	Obtains the MAC of its gateway at first startup and communicates with the gateway with this MAC ever since. The MAC can be edited as needed.
	Optimized system interface for ease of use	Improves window toolbar, shortcut menu, PTZ control, startup wizard, and the menu bar at the bottom of the screen for easier use.
	Enhanced playback on the Web interface	Allows smart playback and event-based playback on the Web interface.
	PTZ control	The system interface supports PTZ control using shortcut keys.
Improved features	Enhanced ability to connect to IP cameras	Added the following for Uniview IP cameras:1. White balance mode2. Scenes3. Alarm indicating failed camera access attempts
	Enhanced downlink ONVIF	Allows the user to disable time synchronization with IP cameras. This feature prevents the problem that some third-party IP cameras cannot get online because they do not support time zone synchronization or time synchronization.
	Enhanced uplink ONVIF	 Combines uplink ONVIF port with HTTP port to improve networking adaptability. Reports more alarm types (disk offline, disk abnormal). Allows the obtainment and modification of the device name.

Item	Feature	Description
	Log export	Allows the user to export logs as CVS files for easy search and management.
	One plug-in for NVR and IPC	Allows the user to install the plug-in only once for accessing the NVR and IP cameras using a Web browser.
	Plug&play	Changes the default IP address to 192.168.1.30 while also supports 192.168.0.30 to adapt to default network environments of most routers and network switches and simplify configuration.
	Network security	Improves protection against network attacks for better user privacy.
	User management	Increases the number of concurrent remote users from 16 to 128.
	Web-based upgrade	Filters file types for local upgrade through the Web interface.
	Maintenance tool	Allows the changing of user password through EZTools.
Deleted features	None	None

Table 8 B3116P20 Feature Changes

Item	Feature	Description
	Manual alarm output control	Enables the user to trigger or clear output alarms manually.
	Preview control	Displays a logo in preview windows for the user with no live view permission in these windows.
	Packet capture on Web	Enables the user to capture packets on the NVR's NIC from the Web.
	Drag in preview window	Enables the user to switch a camera by dragging the preview window.
	Watermark on recording to prevent tampering	Enables the user to use a tool and determine whether the exported video recorded from a watermark-enabled camera has been tampered with.
Newly added	Playback by log	Enables the user to play recordings based on log search results in the log query window.
features	Preview in camera window on NVR	Enables preview in the camera window.
	Bad sector detection	Enables disk status self-test and back sector detection.
	UNP connection by dial-up	Enables connection to a UNP server by dial-up.
	Audio detection alarm	Can identify and raise audio detection alarms when connected to IP cameras that support audio detection.
	-	1. Allows users to stop buzzer manually.
	Buzzer configuration	2. Enables the buzzer to stop sounding when the alarm is cleared.
	Optimized startup wizard	Displays different procedures intelligently, simplifies steps and improves usability.
Improved features	Optimized stream selection in multi- window preview in system interface	Optimizes rules for choosing streams in multi-window preview: uses sub stream by default and uses main stream if sub stream is unavailable; enables stream preference configuration (main or sub stream) in multi-window preview.
	Enhanced capability of connecting IP cameras via ONVIF	Enables compatibility with XiongMai IP cameras, enables automatic adding of IP cameras and changing of IP addresses.
	Enhanced private	Enables the user to upgrade IP cameras by cloud and restore factory

Zhejiang Uniview Technologies Co., Ltd.

Item	Feature	Description
	protocol	default settings for IP cameras on the NVR.
	Audio output control	1. The audio on/off button, switch camera button, and the volume slider are moved to the preview window toolbar, allowing the user to mute or play sound for each channel separately.
	Image snapshot and upload via FTP	2. Enables the configuration of audio data transfer to control whether the IP camera sends audio data or not.
		Supports scheduled snapshot, alarm-triggered snapshot, and snapshot sending via e-mail and upload via FTP. Models that support this function: NVR308-32R, NVR308-64R.
	Snapshot as email attachment	Enables snapshot sending by email. Models that support this function: NVR308-32R, NVR308-64R.
	Optimized playback	1. Starts playback automatically for the corresponding camera when the user selects a preview window and then selects Playback from the shortcut menu.
	operation	2. Enables the user to deselect all the selected cameras by clicking the Close All button added in the playback window.
	Optimized zoom area	Specifies aspect ratio for zoom areas drawn by the user.
	Adaptive to changed camera IP address	The NVR can automatically identify and reconnect DHCP-enabled IP cameras after their IP addresses are changed.
	Enhanced uplink ONVIF capability	When connected to a higher-level management platform via ONVIF, the NVR supports recording type search, disk status search, smart playback, and enables snapshot from the platform without establishing live view.
	Maintenance info	1. Exported diagnosis information is improved.
	collection	2. Enables the user to switch on the debug function with Ctools to gather more information.
	Enhanced client functions	Enables the user to test network bandwidth and diagnose network delay on EZStation and mobile client.
	Automatic patrol resumption for PTZ camera	Enables the PTZ camera to resume interrupted patrol after a restart due to power failure.
	Domain name identification for NTP and other servers	Identifies domain names input for the NTP server and the server in network delay and packet loss test.
	Enhanced keyboard functions	Enables Uniview surveillance keyboards to control presets of PTZ cameras.
	Optimized cloud status	Displays causes for devices failed to connect to EZCloud.
Deleted features	None	None

4.2 Operation Change Description

None

5 Related Documents and Delivery Method

Table 9 Related Document List

Manual Name	Manual Version	Delivery
Network Video Recorders Quick Guide	V1.00	Deliver with device.

6 Version Upgrade Guidance

6.1 Precautions

- This software system includes a software program mirror (Program.bin). Before you start upgrade, please back up configuration data through the system or Web interface in case the upgrade fails.
- Maintain proper network connection and power supply during the upgrade.

6.2 Upgrade Procedure

The version can be upgraded through the system interface and the Web interface, both support cloud upgrade.

6.3 Upgrade Through the System Interface

The system interface provides two options for upgrading the system software: local upgrade using a USB drive and cloud upgrade.

1. Local upgrade

Before you start, copy the correct upgrade file to the root directory of the USB drive.

- (1) Plug the USB drive into the USB interface on the NVR.
- (2) Log in to the system interface as "admin".
- (3) Click Maintain > Upgrade.
- (4) Click **Upgrade**, select the upgrade file from the drop-down list, and then click **Upgrade**. A prompt message appears.
- (5) Click **OK**.

Figure 1 Prompt Message

		System	Message	
•	The device will restart after the upgrade. Continue?			
		ОК	Cancel	

(6) The NVR will restart automatically when the upgrade is completed.

2. Cloud upgrade

Before you start, check that the NVR is correctly connected to the public network.

- (1) Click **Maintain > Upgrade**, and then click **Check** to check for the latest version.
- (2) Click **Upgrade** after a newer version is detected.

6.4 Upgrade Through the Web Interface

Perform the following steps to upgrade through the Web interface:

(1) Log in to the Web interface as "admin".


(2) Click Settings > Maintenance > Maintenance.

Figure 2 System Maintenance

บทิง	Ę	🛛 Live View 📰 Playback 🌞 Settings
Client	*	Maintenance
Device	~	Restart Restart device
Camera	~	Default Keep network, user, time and DST settings
Hard Disk	~	Factory Default Default all settings
Alarm	~	
Alert	~	Export Export configuration file
Network	~	Import Configuration Browse Import
User	~	Upgrade Upgrade Upgrade
Maintenance	~	Cloud Upgrade Check
Log Query		Diagnostic Info Export
S.M.A.R.T. Info		Client Log Open Folder
Online User		Note: Do not disconnect power or perform any other operation during upgrade.
Network		
Camera		
Camera Info		
Recording		
Maintenance		

- (3) Click **Browse** right to the **Upgrade** field, select the **Program.bin** file to upgrade, and then click **Upgrade**.
- (4) If the NVR is connected to the public network, you may also click **Check** to perform a cloud upgrade. If a newer version is detected, a prompt message will appear. Click **OK** to start upgrade.

Figure 3 Prompt Message

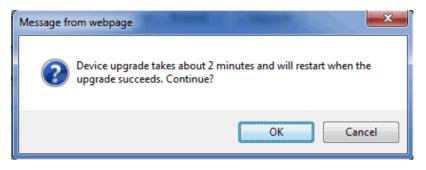

(5) The NVR will restart automatically when the upgrade is completed.

© 2017, Zhejiang Uniview Technologies Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.