NOTIFIER by Honeywell

General view of the NF3000 V4.54 menu

Level 2

Level 3

Level 3a

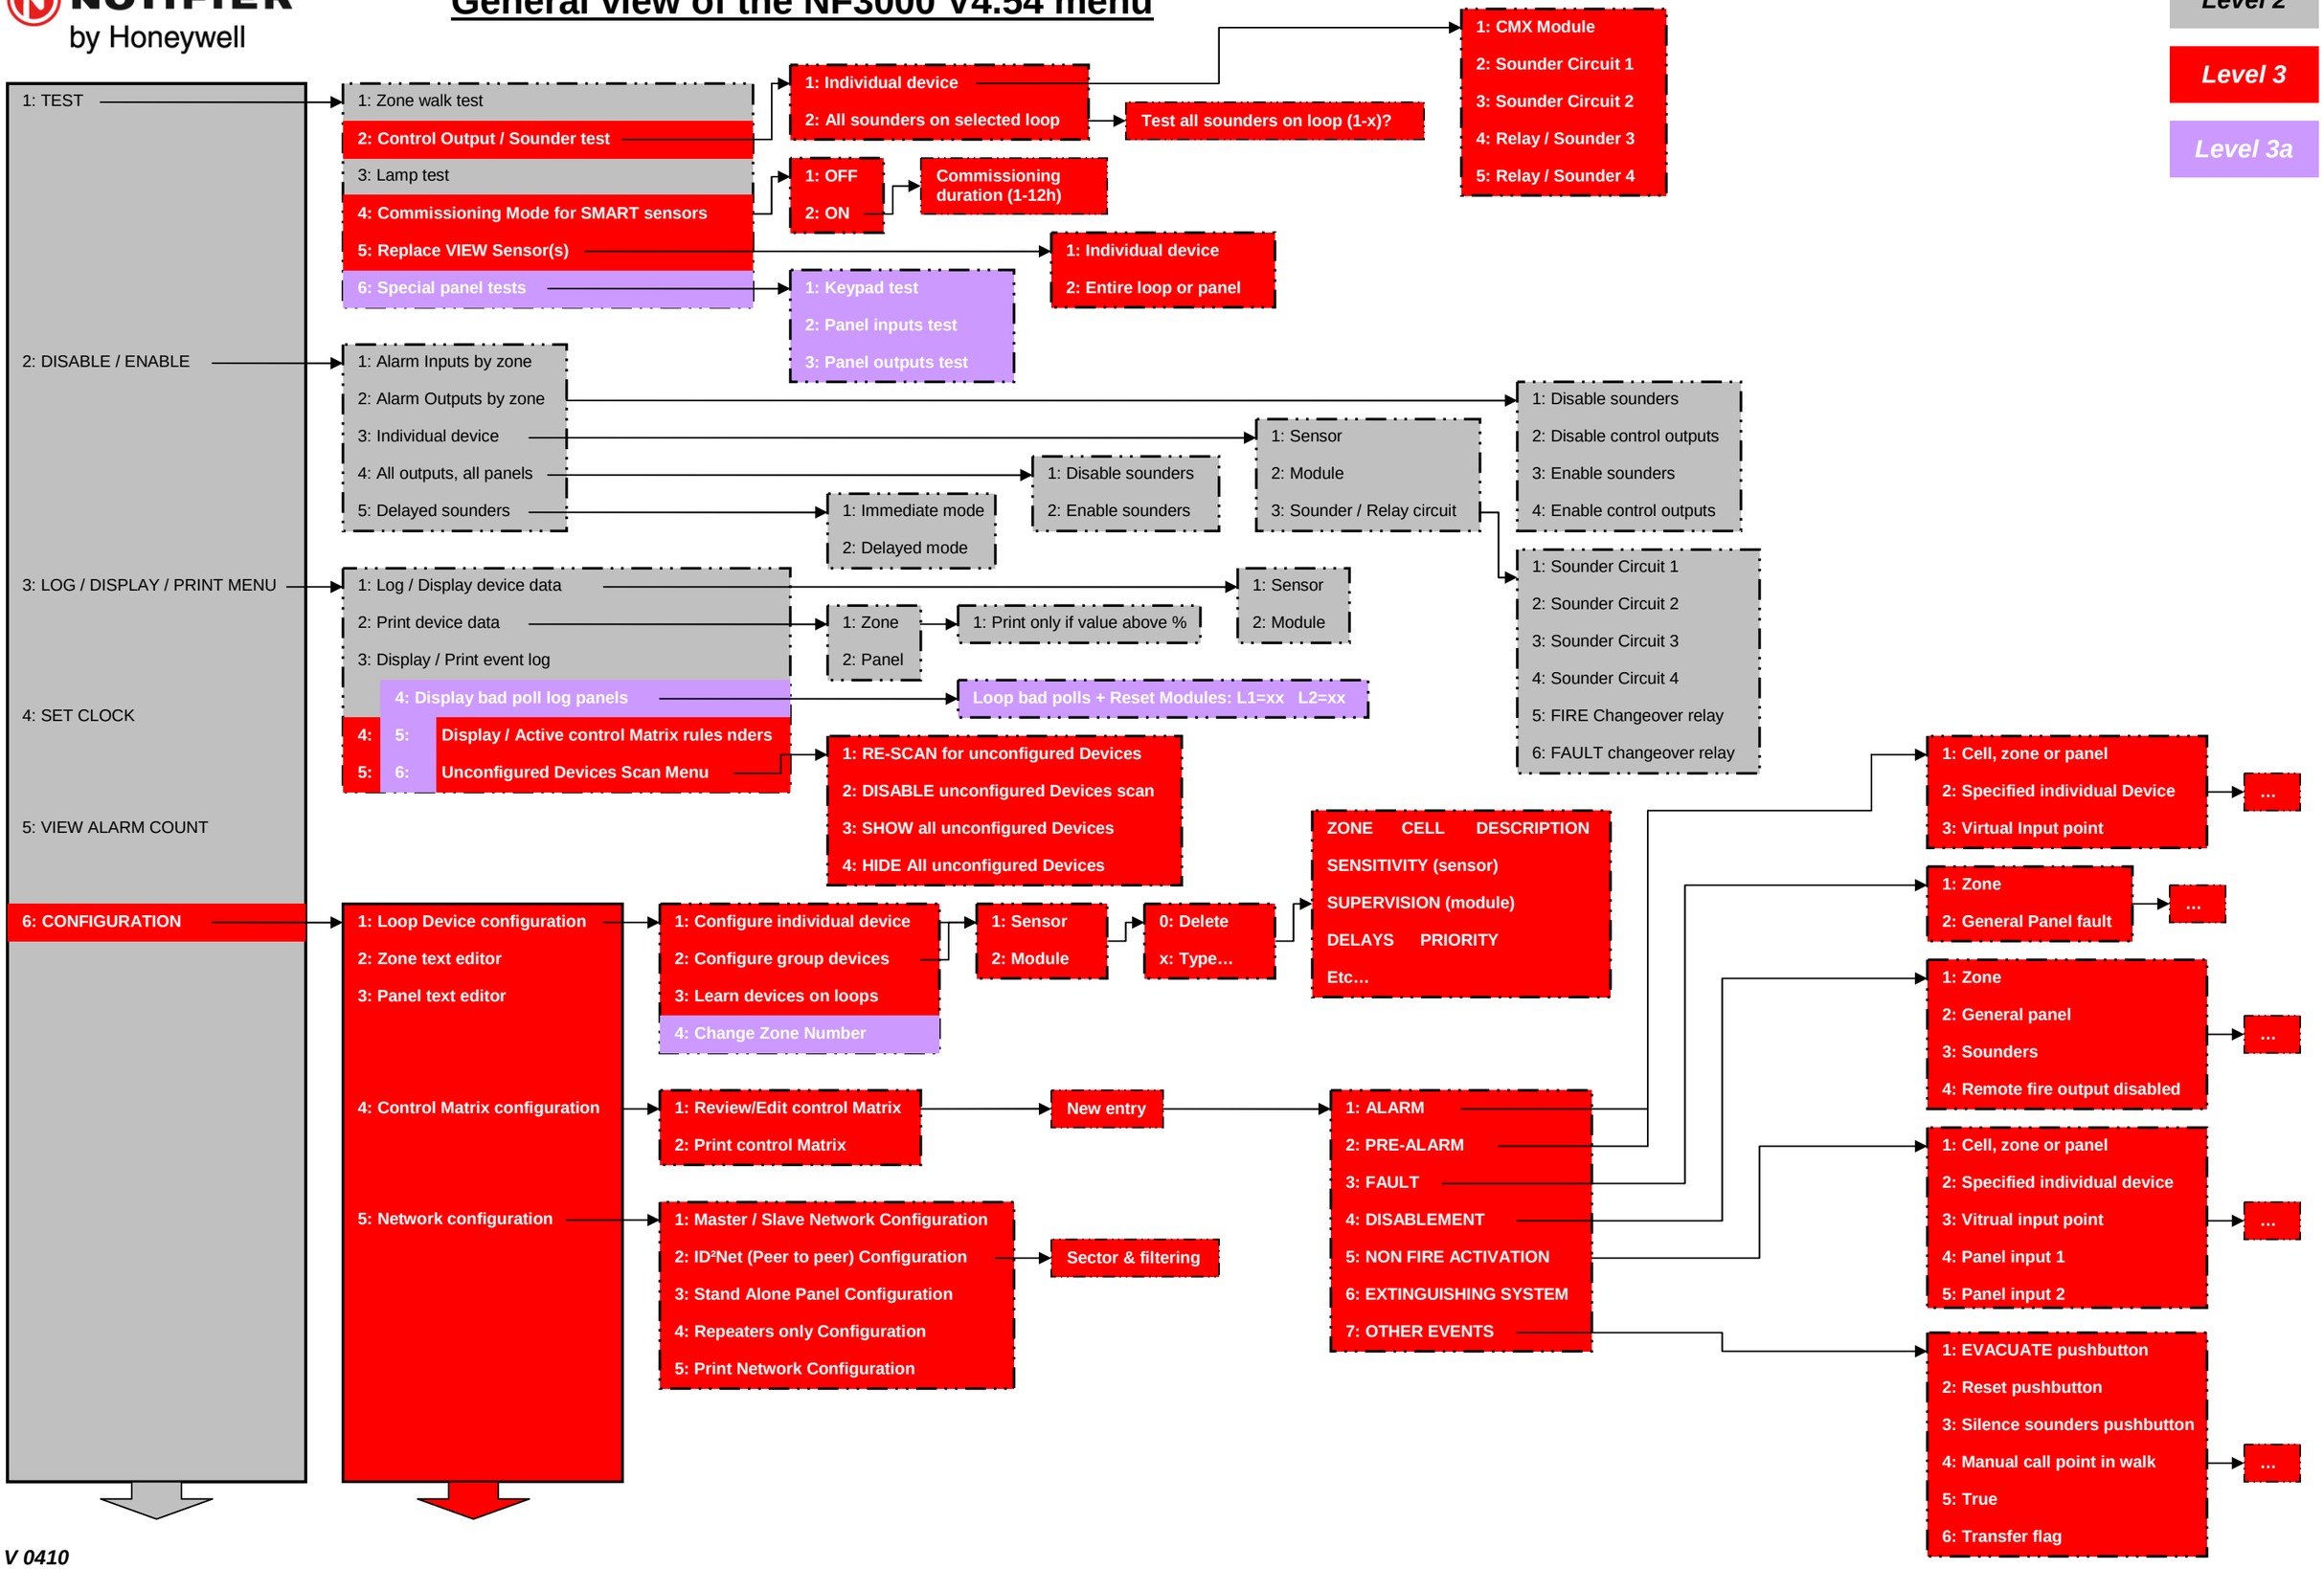

V 0410

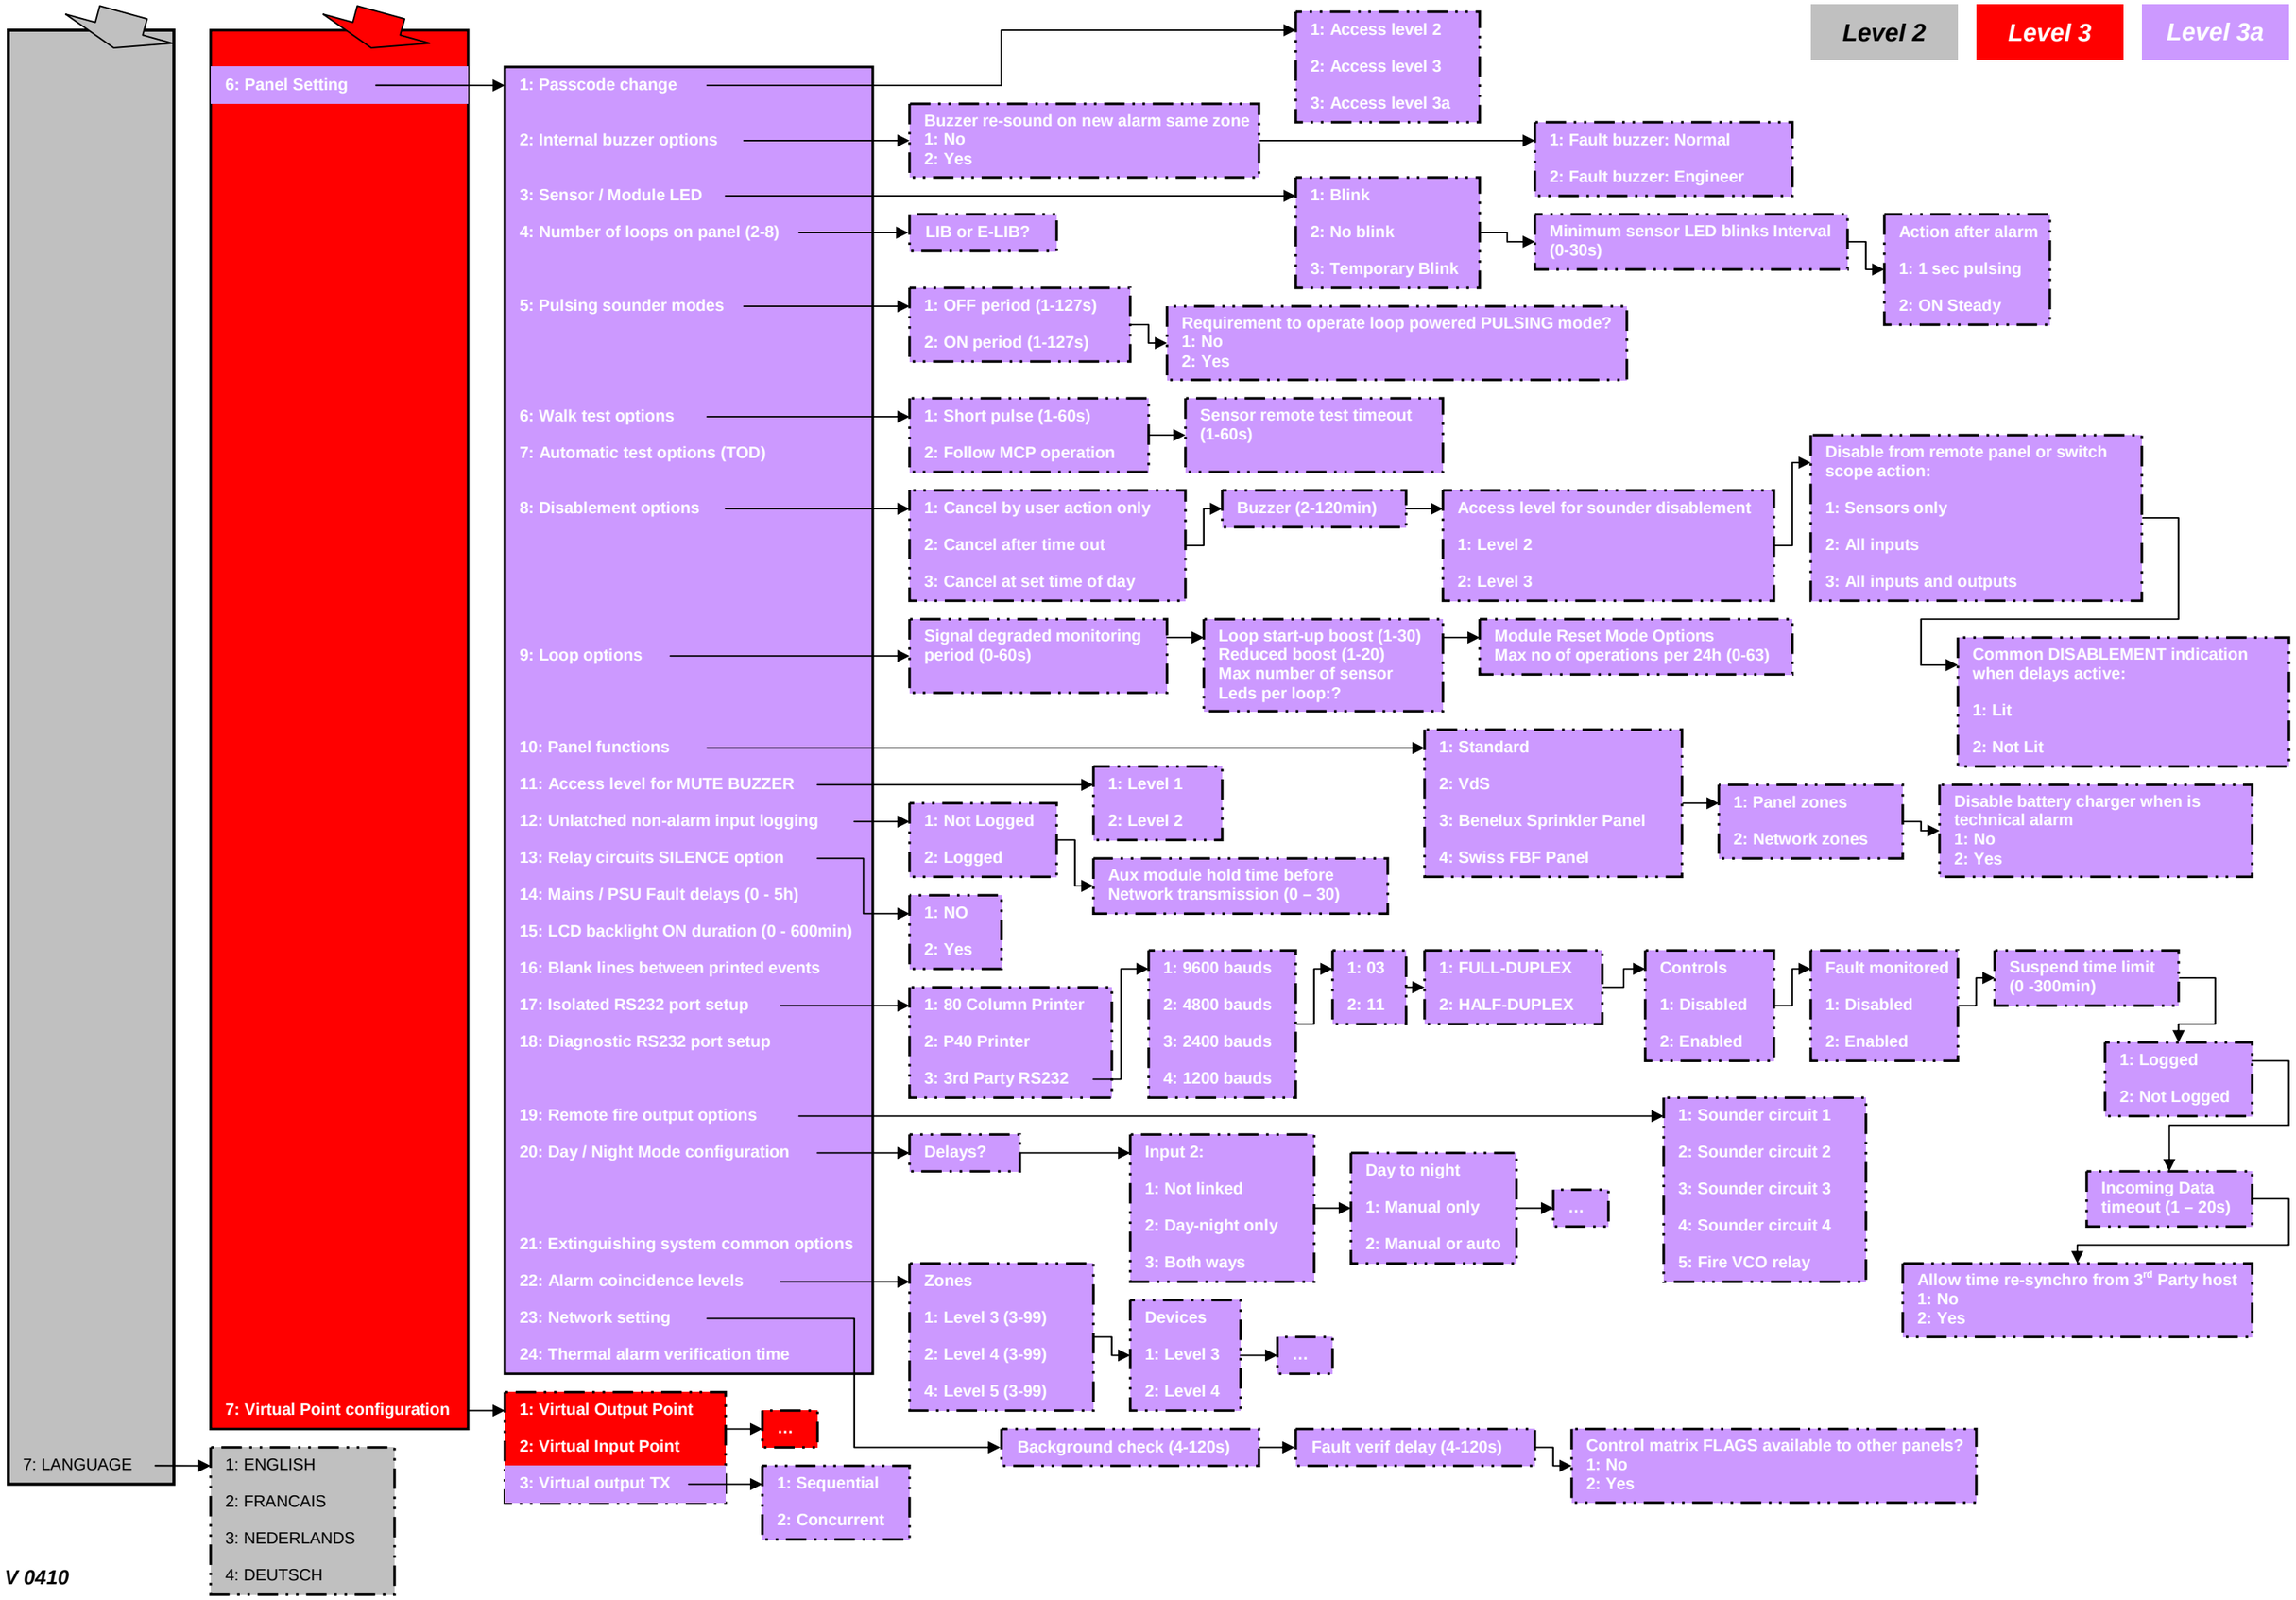
Level 2
Level 3
Level 3a
6: Panel Setting
1: Passcode change
1: Access level 2
2: Access level 3
3: Access level 3a
2: Internal buzzer options
Buzzer re-sound on new alarm same zone
1: No
2: Yes
1: Fault buzzer: Normal
2: Fault buzzer: Engineer
3: Sensor / Module LED
1: Blink
2: No blink
3: Temporary Blink
Minimum sensor LED blinks Interval (0-30s)
Action after alarm
1: 1 sec pulsing
2: ON Steady
4: Number of loops on panel (2-8)
LIB or E-LIB?
5: Pulsing sounder modes
1: OFF period (1-127s)
2: ON period (1-127s)
Requirement to operate loop powered PULSING mode?
1: No
2: Yes
6: Walk test options
7: Automatic test options (TOD)
1: Short pulse (1-60s)
2: Follow MCP operation
Sensor remote test timeout (1-60s)
8: Disablement options
1: Cancel by user action only
2: Cancel after time out
3: Cancel at set time of day
Buzzer (2-120min)
Access level for sounder disablement
1: Level 2
2: Level 3
Disable from remote panel or switch scope action:
1: Sensors only
2: All inputs
3: All inputs and outputs
9: Loop options
Signal degraded monitoring period (0-60s)
Loop start-up boost (1-30)
Reduced boost (1-20)
Max number of sensor Leds per loop:?
Module Reset Mode Options
Max no of operations per 24h (0-63)
Common DISABLEMENT indication when delays active:
1: Lit
2: Not Lit
10: Panel functions
1: Standard
2: VdS
3: Benelux Sprinkler Panel
4: Swiss FBF Panel
1: Panel zones
2: Network zones
Disable battery charger when is technical alarm
1: No
2: Yes
11: Access level for MUTE BUZZER
1: Level 1
2: Level 2
12: Unlatched non-alarm input logging
1: Not Logged
2: Logged
Aux module hold time before Network transmission (0 – 30)
13: Relay circuits SILENCE option
14: Mains / PSU Fault delays (0 - 5h)
15: LCD backlight ON duration (0 - 600min)
1: NO
2: Yes
16: Blank lines between printed events
17: Isolated RS232 port setup
18: Diagnostic RS232 port setup
1: 80 Column Printer
2: P40 Printer
3: 3rd Party RS232
1: 9600 bauds
2: 4800 bauds
3: 2400 bauds
4: 1200 bauds
1: 03
2: 11
1: FULL-DUPLEX
2: HALF-DUPLEX
Controls
1: Disabled
2: Enabled
Fault monitored
1: Disabled
2: Enabled
Suspend time limit (0 -300min)
1: Logged
2: Not Logged
Incoming Data timeout (1 – 20s)
Allow time re-synchro from 3rd Party host
1: No
2: Yes
19: Remote fire output options
1: Sounder circuit 1
2: Sounder circuit 2
3: Sounder circuit 3
4: Sounder circuit 4
5: Fire VCO relay
20: Day / Night Mode configuration
Delays?
Input 2:
1: Not linked
2: Day-night only
3: Both ways
Day to night
1: Manual only
2: Manual or auto
...
21: Extinguishing system common options
22: Alarm coincidence levels
Zones
1: Level 3 (3-99)
2: Level 4 (3-99)
4: Level 5 (3-99)
Devices
1: Level 3
2: Level 4
...
23: Network setting
Background check (4-120s)
Fault verif delay (4-120s)
Control matrix FLAGS available to other panels?
1: No
2: Yes
24: Thermal alarm verification time
7: Virtual Point configuration
1: Virtual Output Point
2: Virtual Input Point
...
3: Virtual output TX
1: Sequential
2: Concurrent
7: LANGUAGE
1: ENGLISH
2: FRANCAIS
3: NEDERLANDS
4: DEUTSCH

V 0410