

IPC\_HCMN2103-B0010D1512

## Release Notes

Zhejiang Uniview Technologies Co., Ltd

## IPC\_HCMN2103-B0010D1512 Release Notes

**Keywords:** Version information, version upgrade

**Abstract:** This document provides detailed version information and upgrade procedure for IPC\_HCMN2103-B0010D1512.

**Acronym:**

Acronym	Full Name
IPC	IP Camra

# Content

<b>1 Version Information</b> .....	<b>3</b>
1.1 Version Number .....	3
1.2 Release History .....	3
1.3 Version Mapping Table .....	3
<b>2 Feature Change Description</b> .....	<b>3</b>
<b>3 Version Upgrade Description</b> .....	<b>3</b>
<b>4 Version Upgrade Procedure</b> .....	<b>4</b>
4.1 Upgrade Overview .....	4
4.1.1 Version Upgrade Environment .....	4
4.1.2 Version Upgrade Modes .....	4
4.2 Upgrade Procedure .....	4
4.2.1 Upgrade Through the Web .....	4

# 1 Version Information

## 1.1 Version Number

IPC\_HCMN2103-B0010D1512

## 1.2 Release History

Table 1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_HCMN2103-B0010D1512	NA	2016-1-18	Initial release

## 1.3 Version Mapping Table

Table 2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR201-08LP	B2316P05
NVR-B100-E	B2216P05
NVR308-64E	B3116P05

Table 3 Product models and corresponding versions

Product Series	IPC Series
Series	IPC6252SR、IPC6253SR
Models	<b>IPC6252SR Series:</b> IPC6252SR-X22U、IPC6252SR-X22UG
	<b>IPC6253SR Series:</b> IPC6253SR-X33
Target file name	IPC_HCMN2103-B0010D1512.zip

## 2 Feature Change Description

None.

## 3 Version Upgrade Description

Version B0008D1510 supports normal upgrade. B0008D1510 and later versions cannot be downgraded to earlier versions, e.g., B0007D1509. If version downgrade is really required, contact our customer service staff.


## 4 Version Upgrade Procedure

### 4.1 Upgrade Overview

#### 4.1.1 Version Upgrade Environment

##### 1. Network Architecture for Upgrade

Figure 1 Network architecture

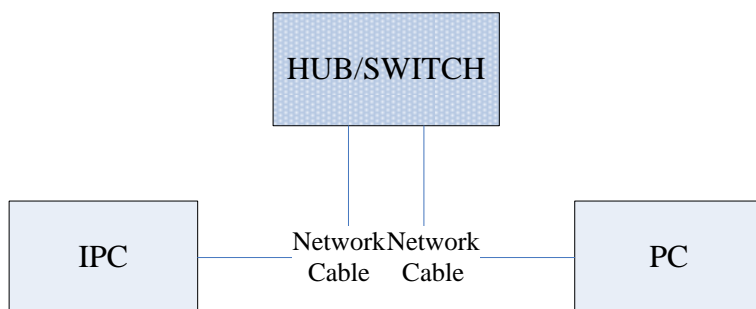

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

#### 4.1.2 Version Upgrade Modes

You can upgrade through the Web.

## 4.2 Upgrade Procedure

### 4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password:123456).
- (2) Click **System > Maintenance**. The **Maintenance** page is displayed.

<b>Firmware Upgrade</b>	
Upgrade File	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upgrade"/> <input type="checkbox"/> Upgrade Boot Program
<b>Device Restart</b>	
<input type="button" value="Restart"/>	Restart the device.
<input type="checkbox"/> Enable Auto Restart	Each Day <input type="button" value="v"/> 02:00:00 <input type="button" value="L"/> <input type="button" value="OK"/>
<b>Config Management</b>	
<input type="button" value="Default"/>	Keep current network and user settings and restore other settings to defaults.
Importing	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Import"/>
Exporting	C:\Users\Desktop\lftp <input type="button" value="Browse..."/> <input type="button" value="Export"/>
<b>Diagnosis Info</b>	
Storage Path	C:\Users\MyLocalFiles\Debug\ <input type="button" value="Browse..."/> <input type="button" value="Download"/>

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC\_HCMN2101-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.

**Maintenance**

---

**Firmware Upgrade**

Upgrade File     Upgrade Boot Program

---

**Device Restart**

Restart the device.

Enable Auto Restart

---

**Config Management**

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

---

**Diagnosis Info**

Storage Path

- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.